

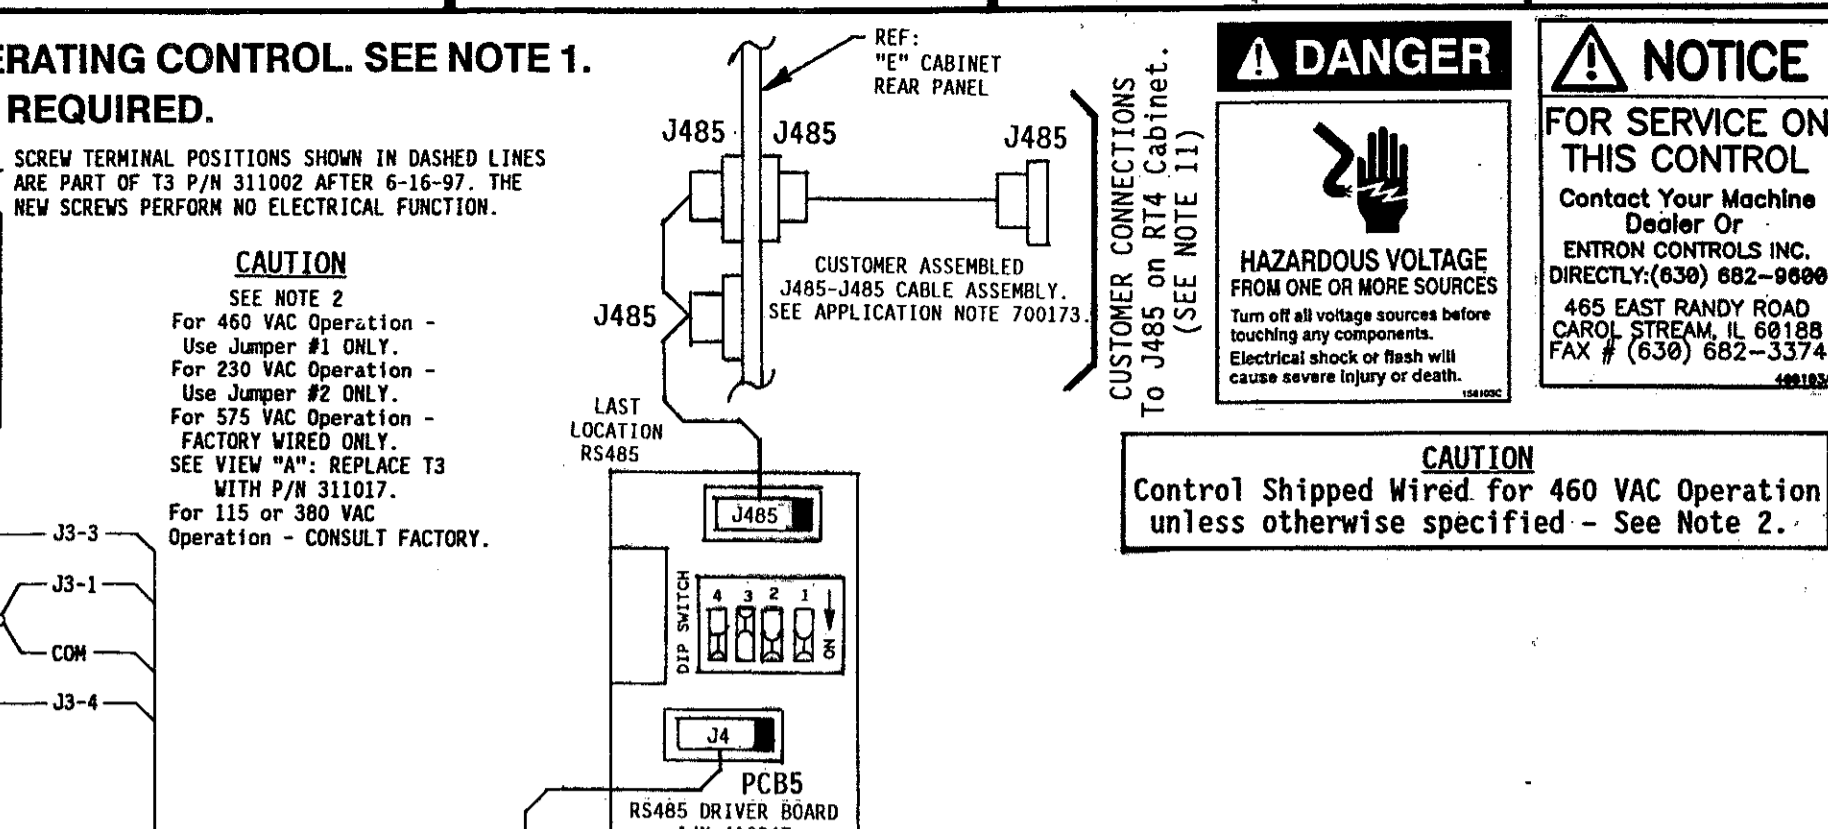
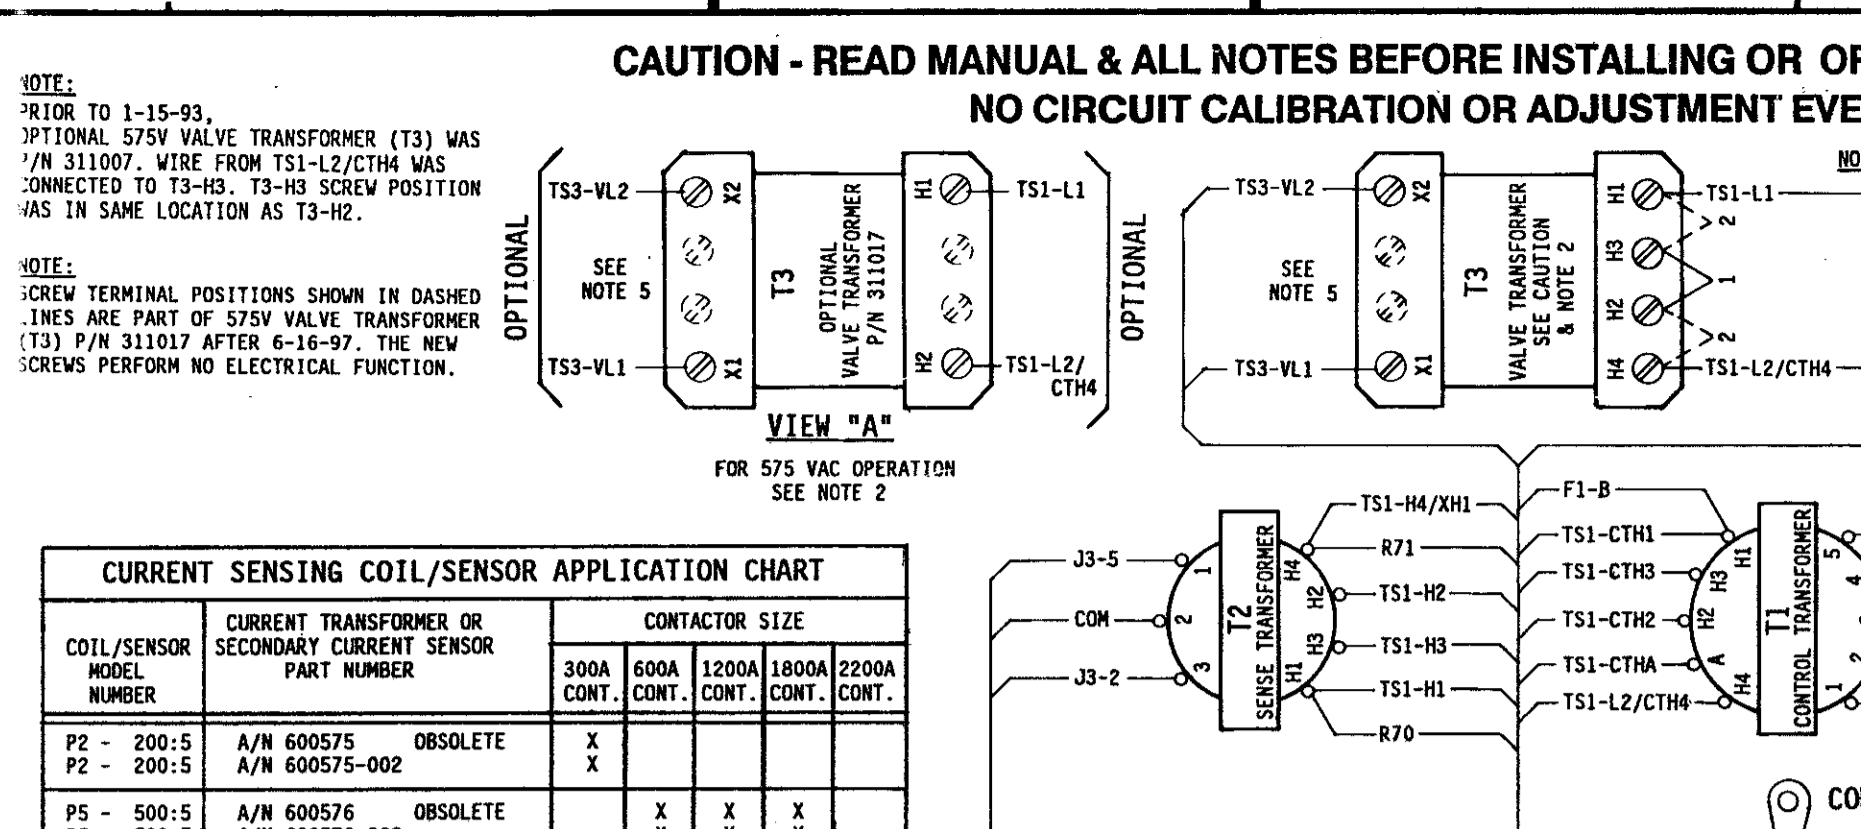
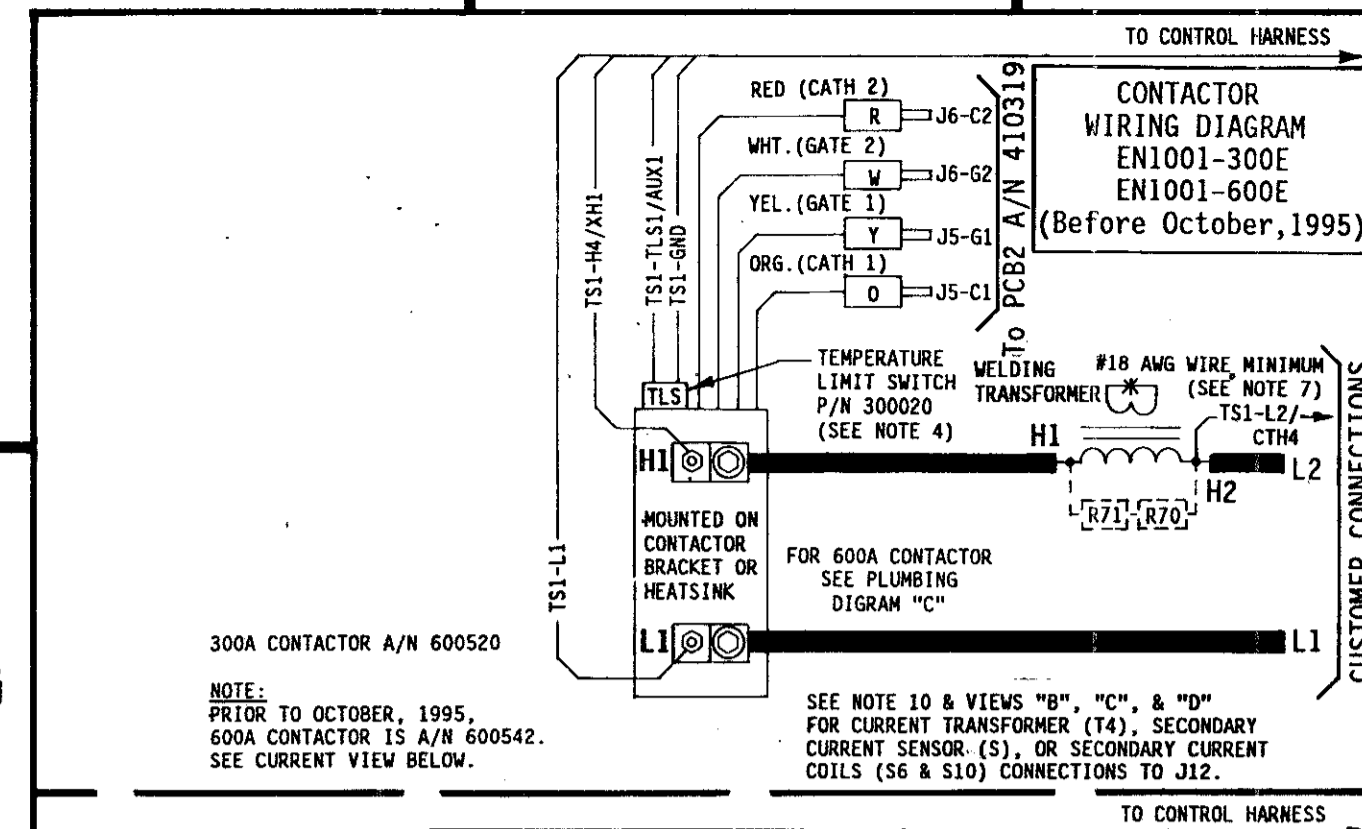
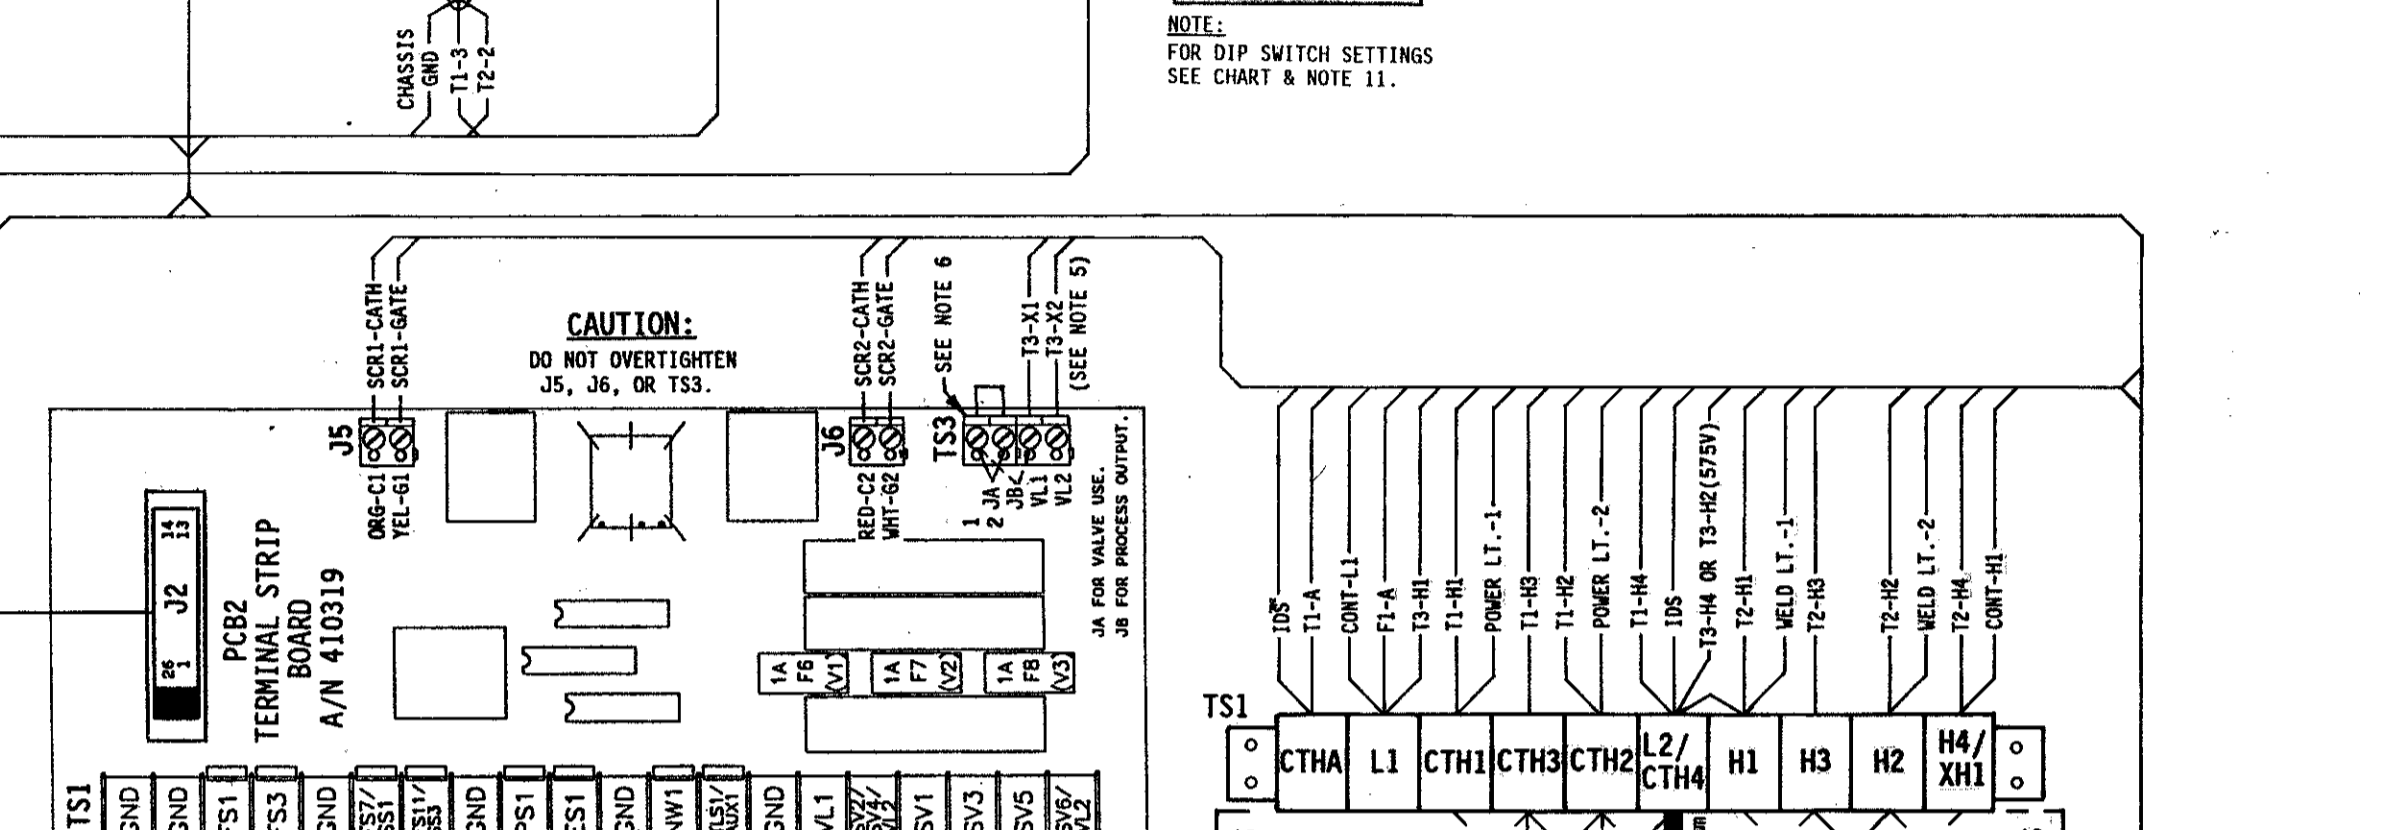


CAUTION - READ MANUAL & ALL NOTES BEFORE INSTALLING OR OPERATING CONTROL. SEE NOTE 1. NO CIRCUIT CALIBRATION OR ADJUSTMENT EVER REQUIRED.

421268-011


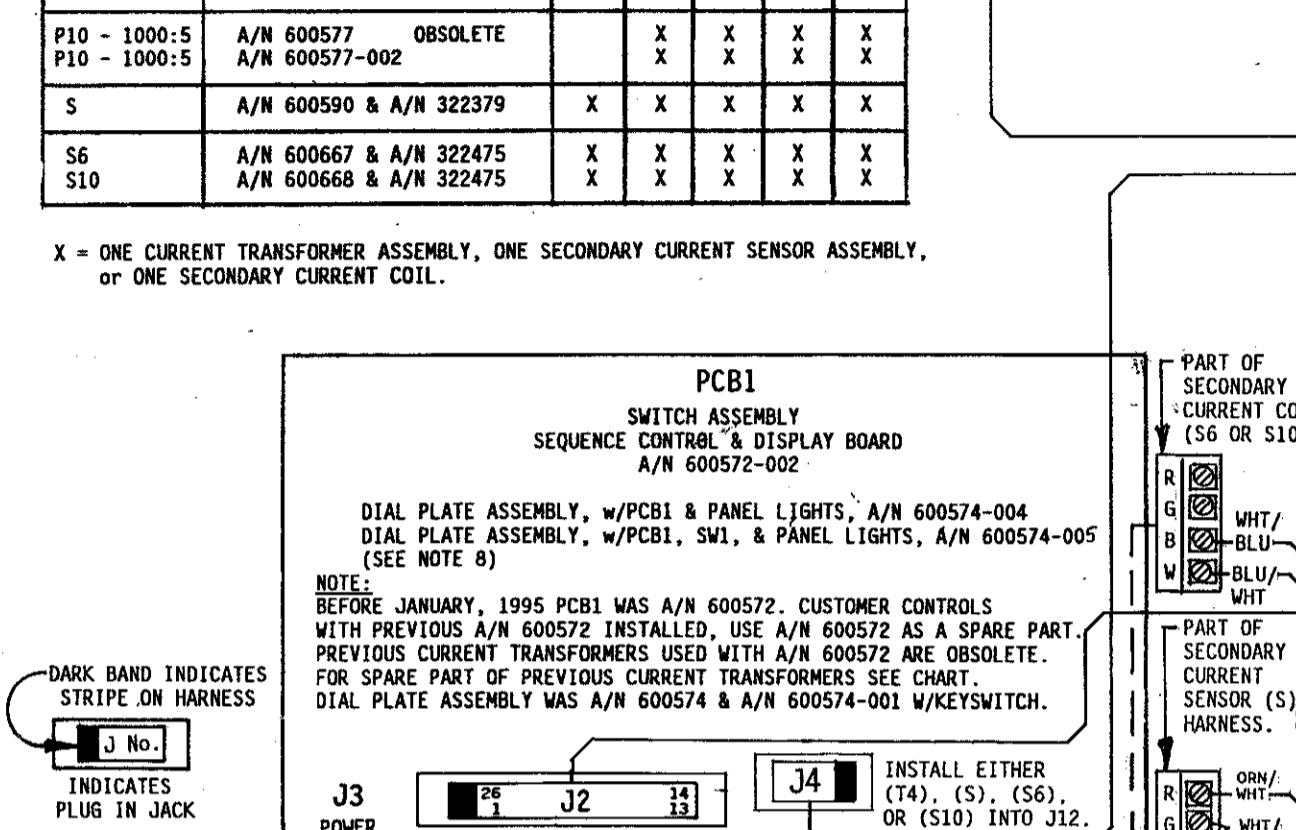


Parts List - Control Section table listing quantities, descriptions, and part numbers for control components like terminal strips, resistors, and relays.



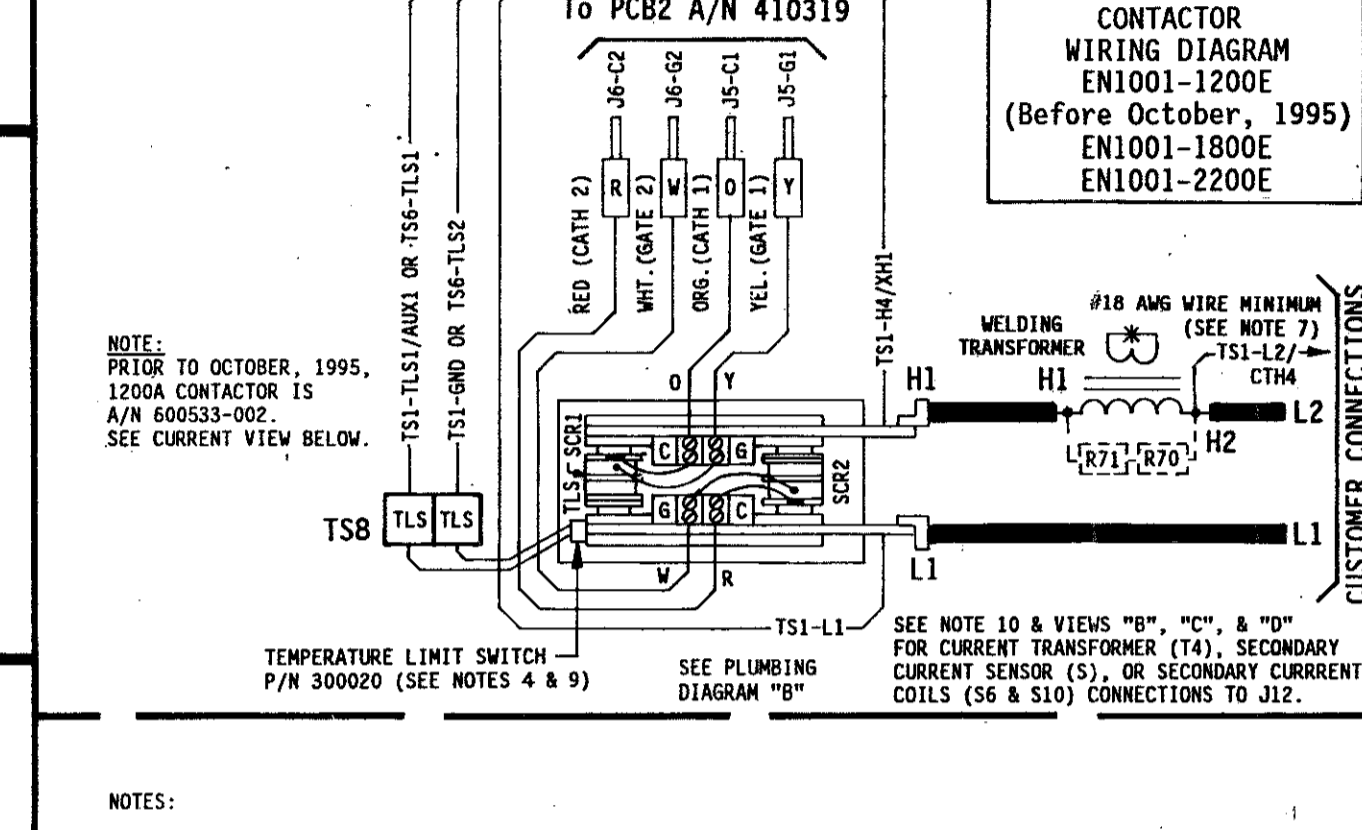


Parts List - Contactor Section table listing quantities and descriptions for contactor components like terminal strips, fuses, and contactors.

NOTES: 1. It is recommended that control wiring... 2. For 460 VAC Operation - Use Jumper #1 on T3 & T51... 3. For Single Stage Pilot Operation - Connect pilot switch to TSI-F53 & T51-GND...

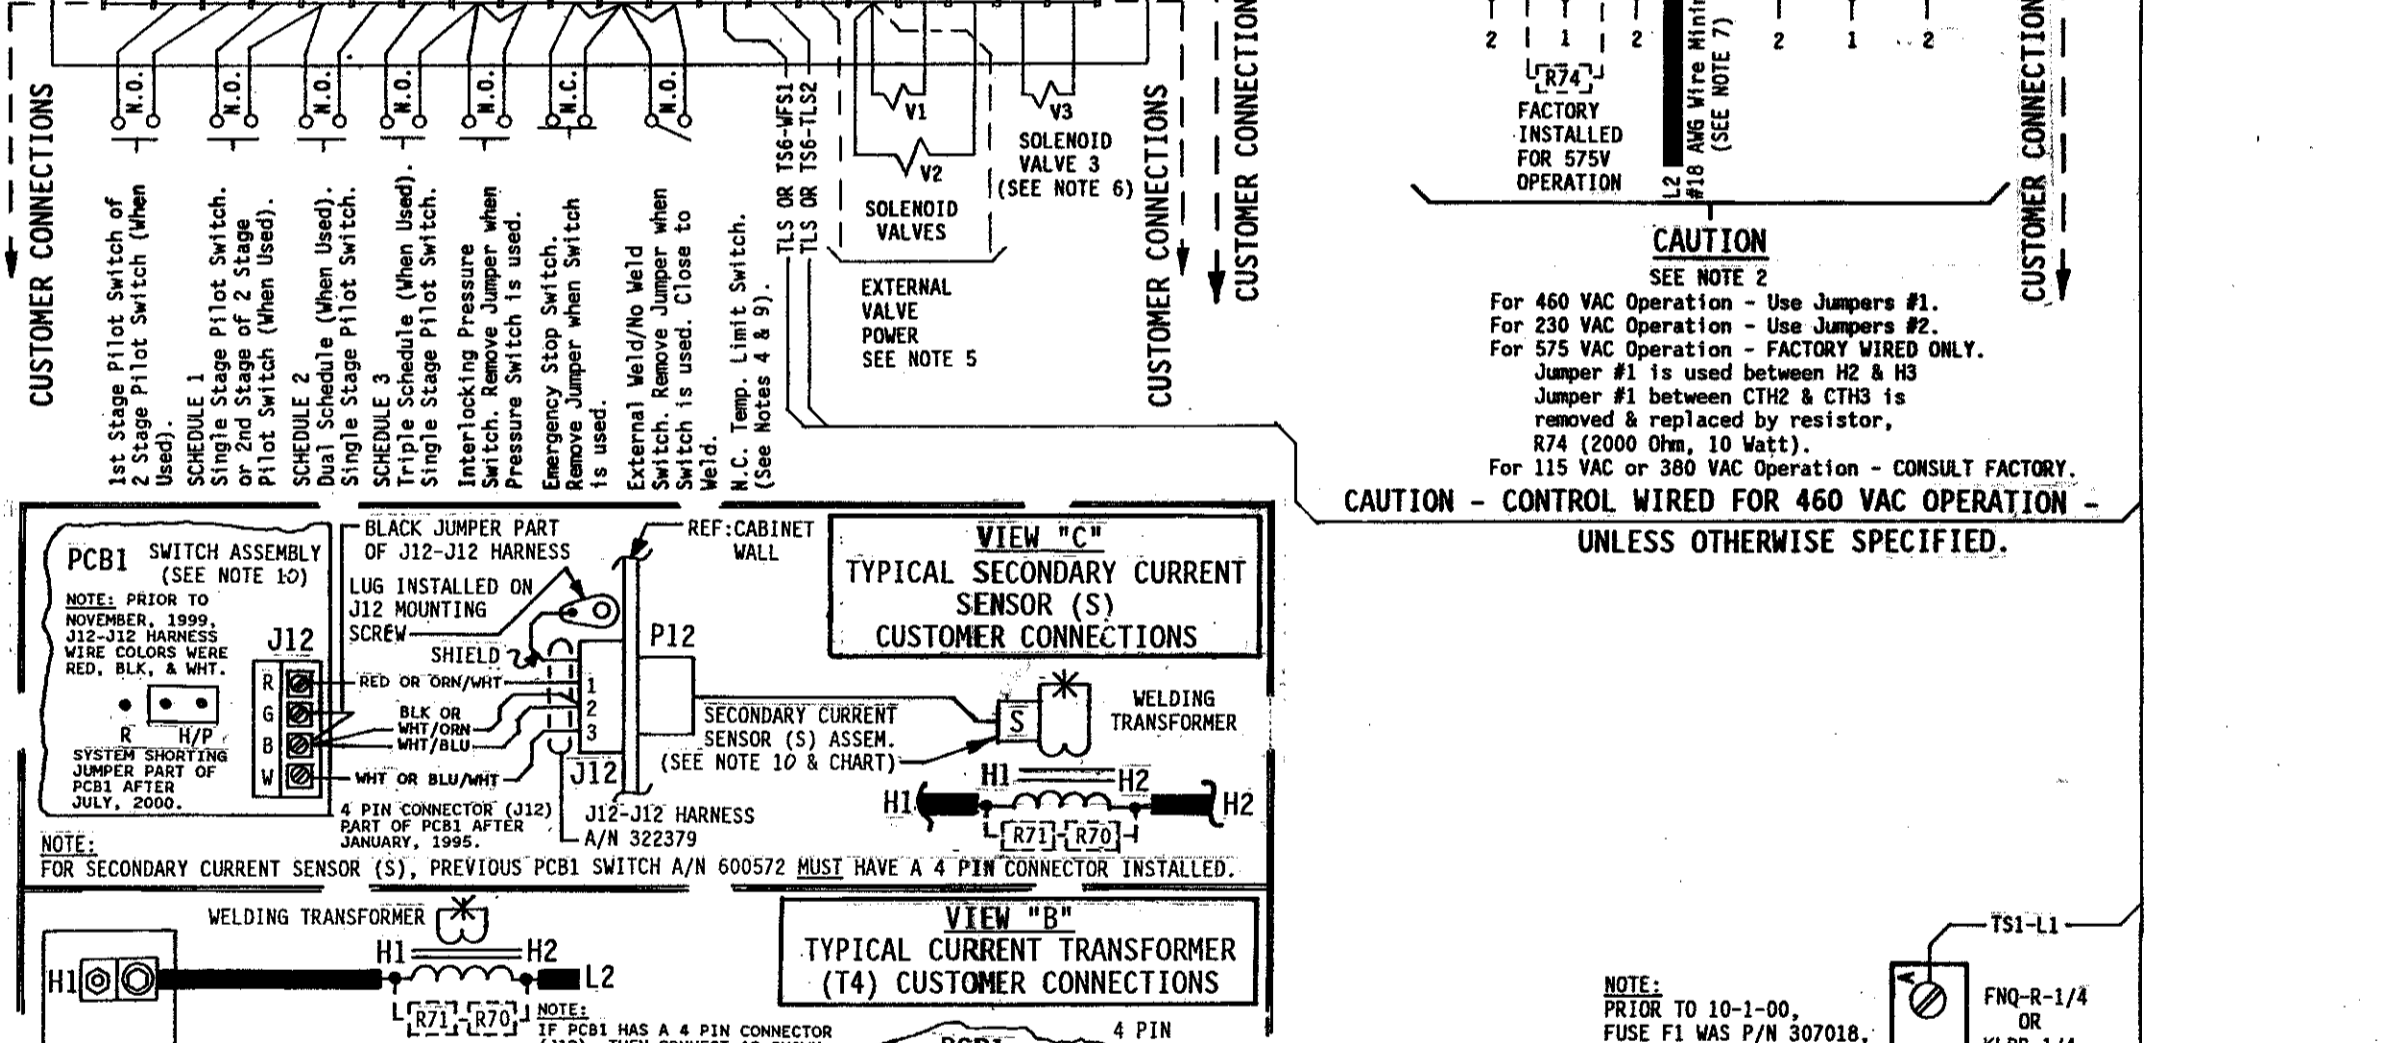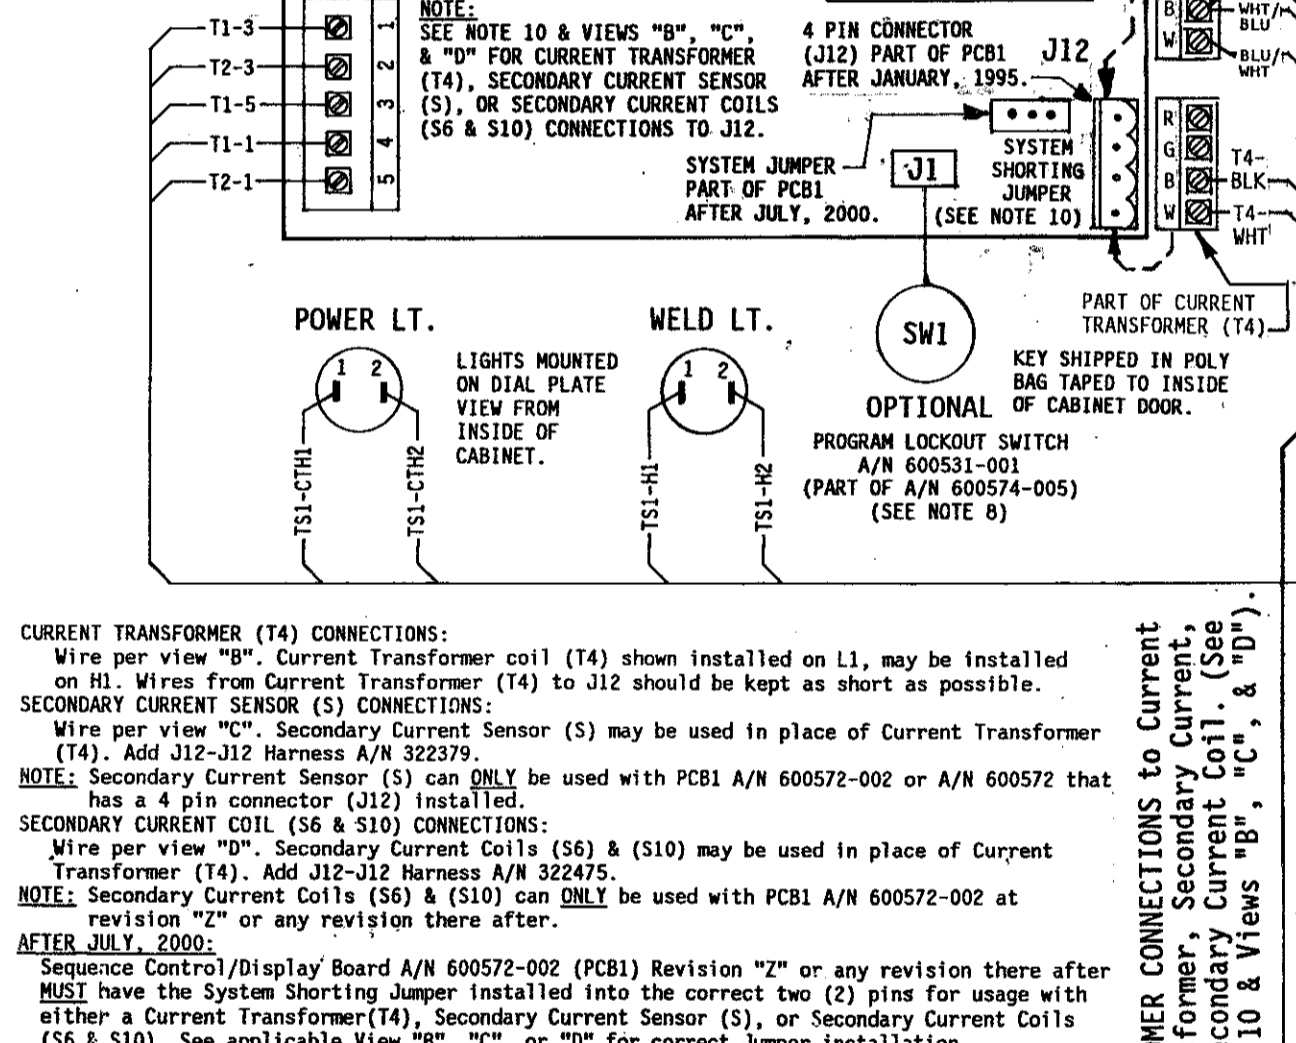

MANUFACTURING INSTRUCTIONS: See Drawing #440445 for Packing Instructions "E" Cabinet. See Drawing #440448 for Label Locations "E" Cabinet. See Drawing #600550, #600550-001, #600550-002, or #600550-003 FOR MECHANICAL ASSEMBLY INSTRUCTIONS.

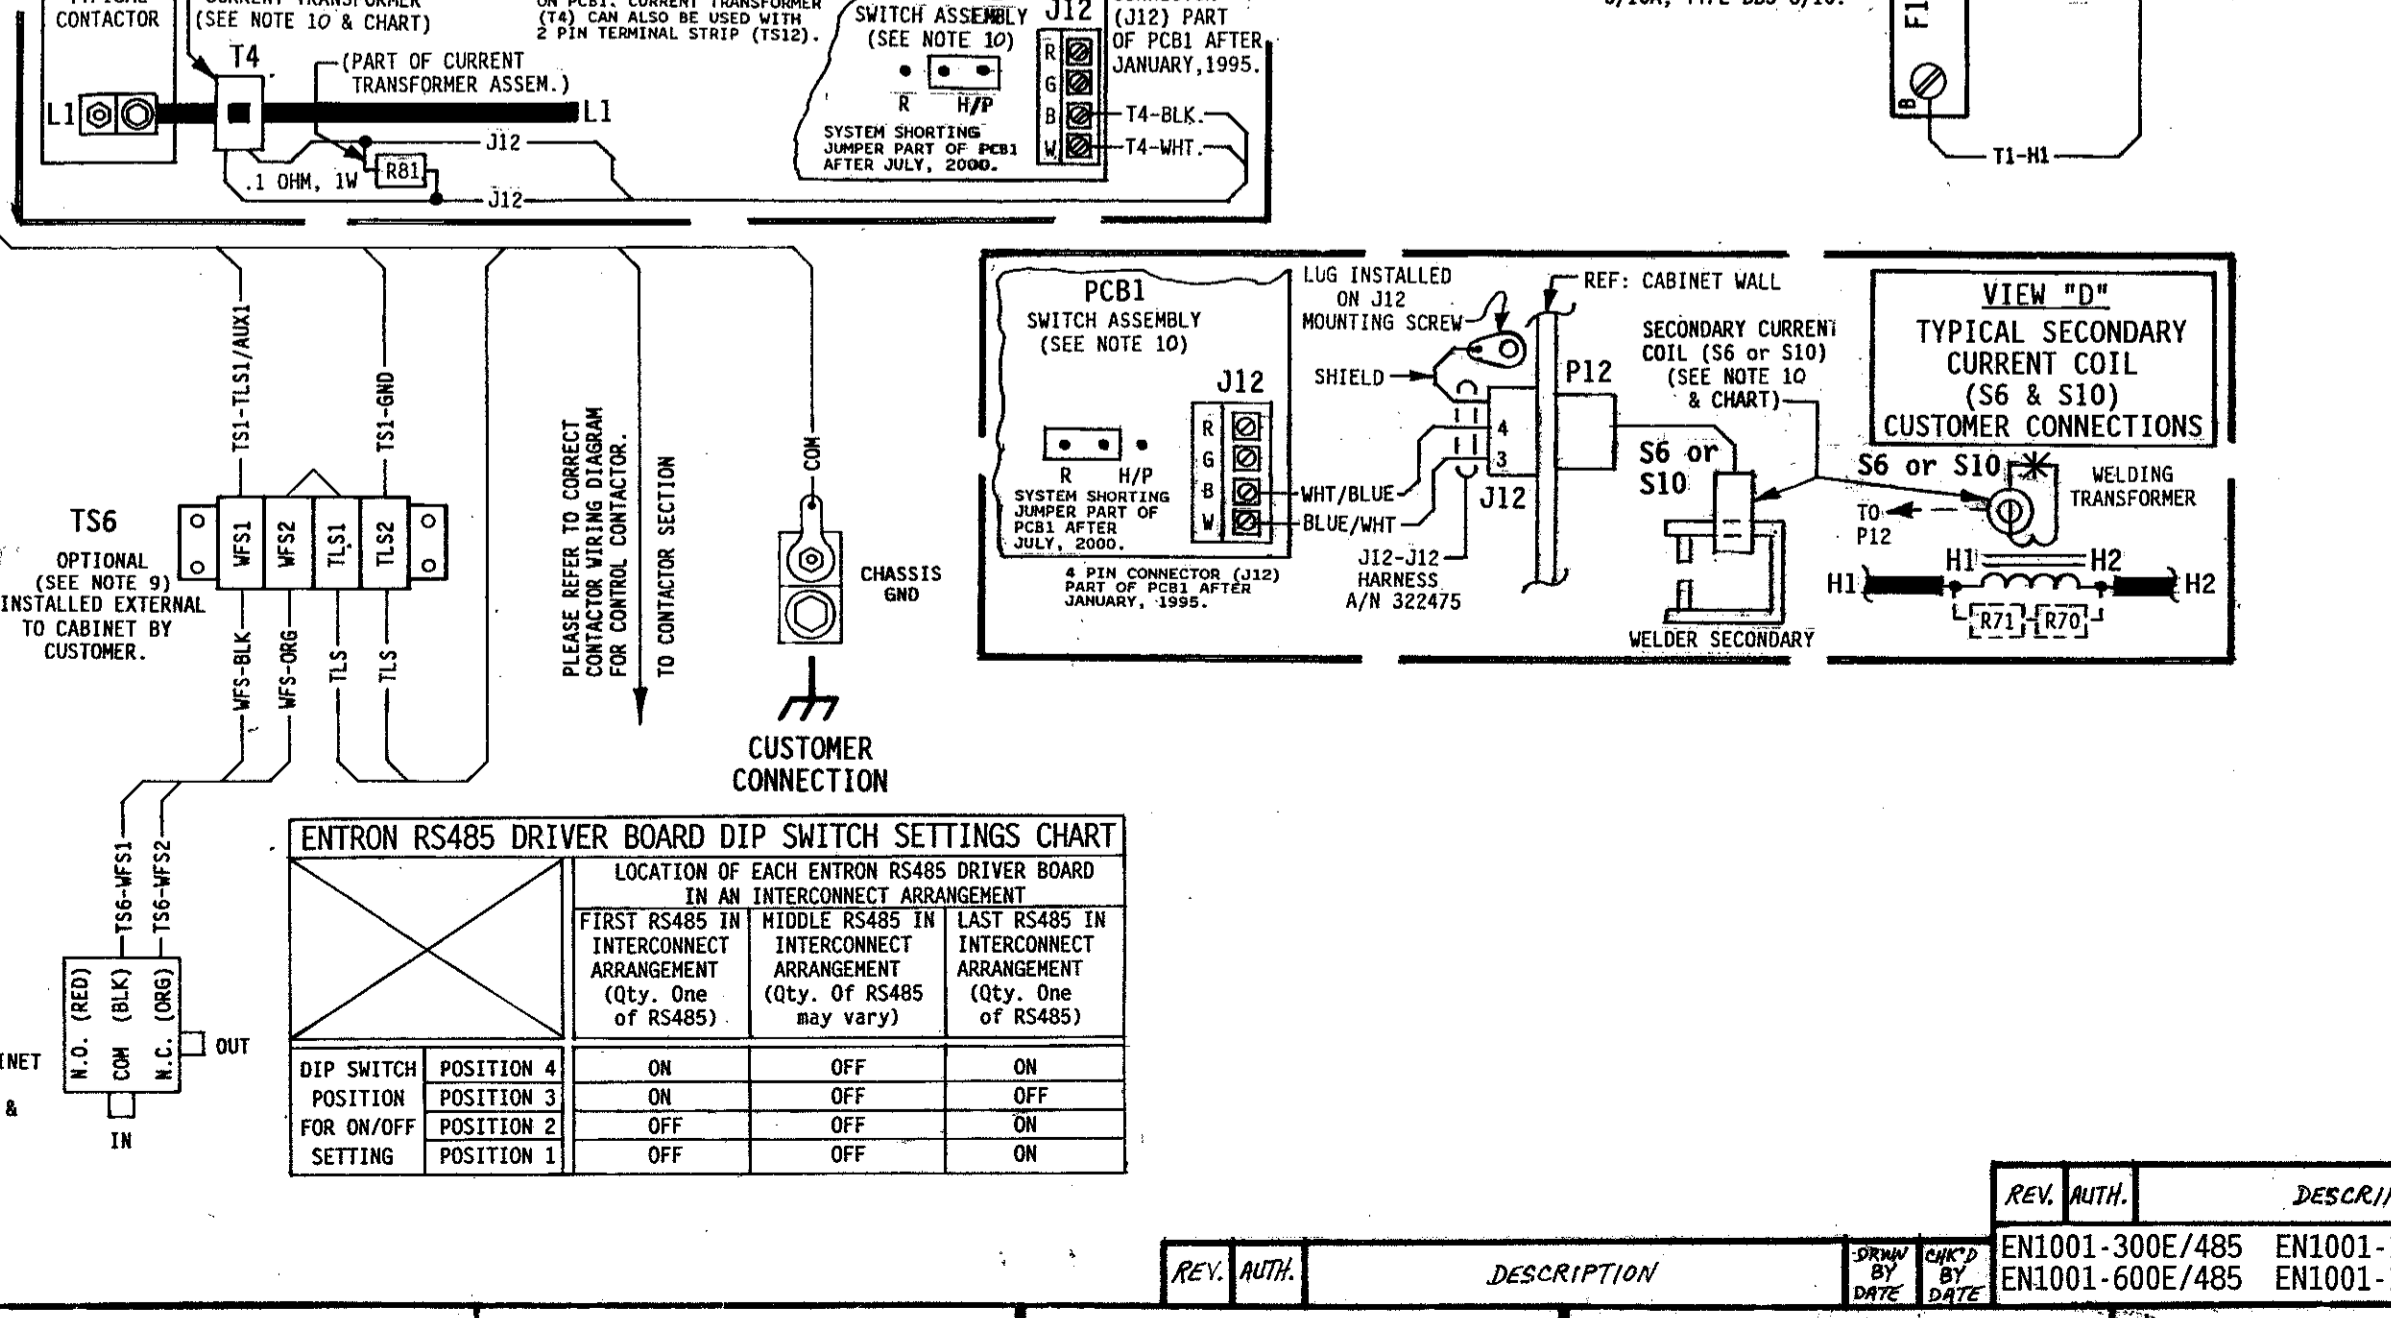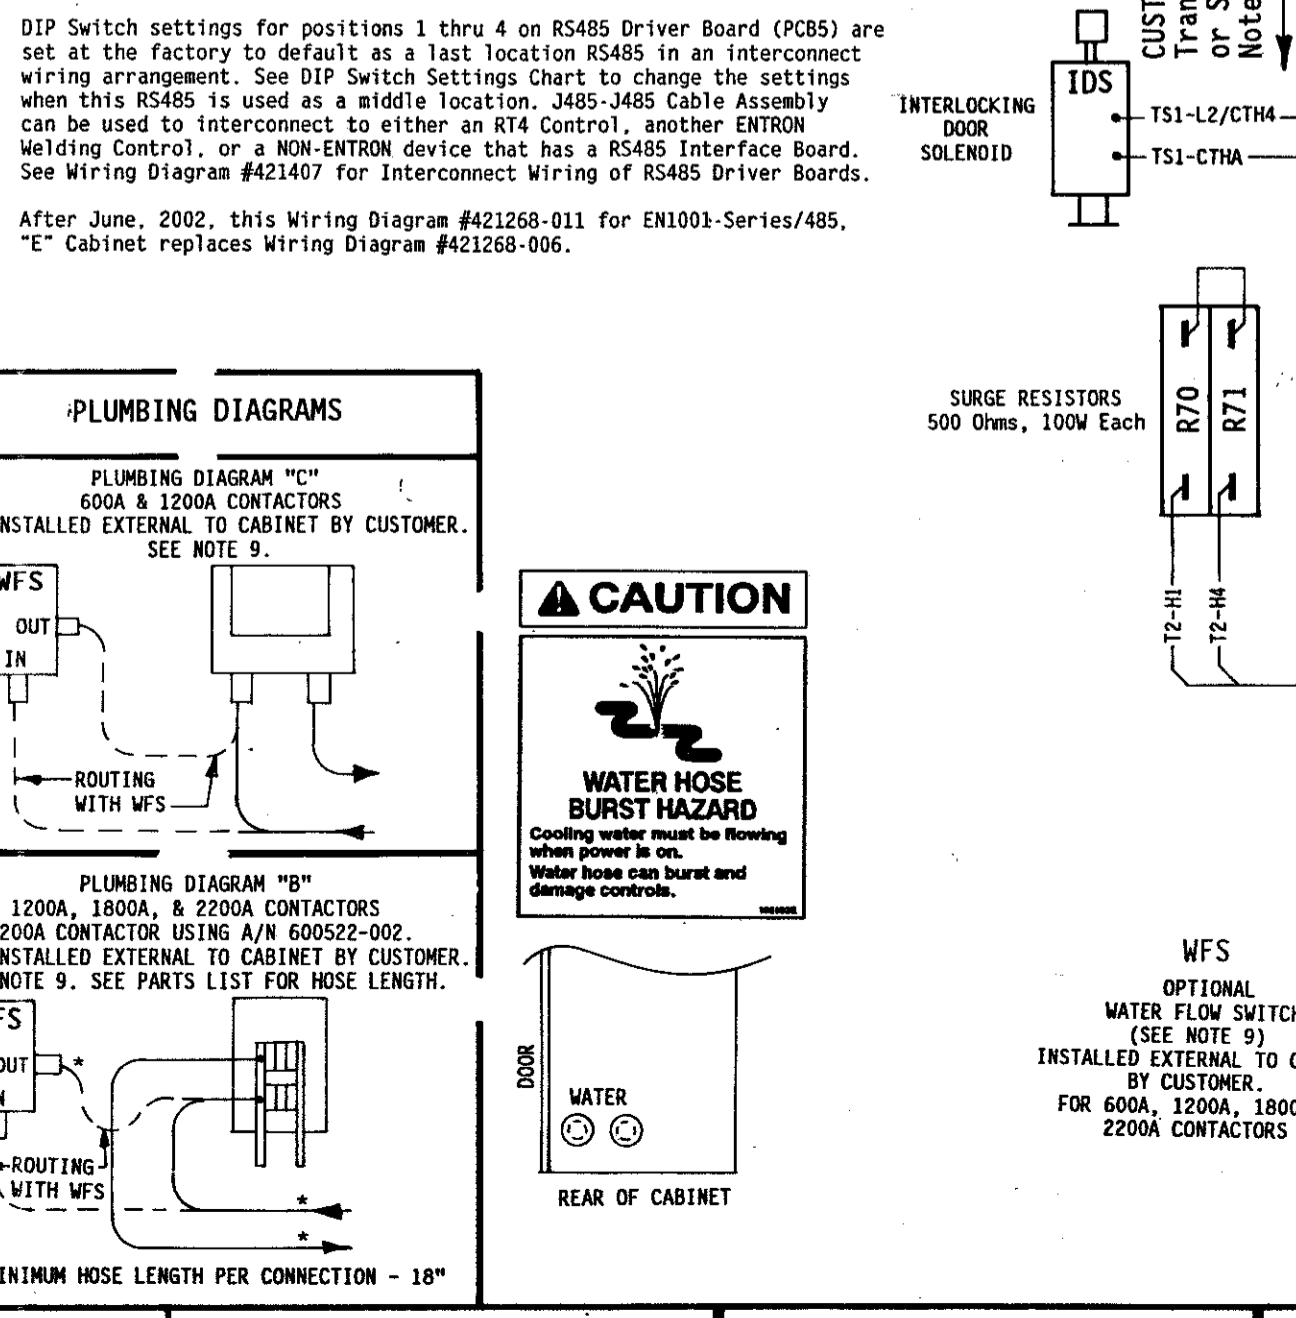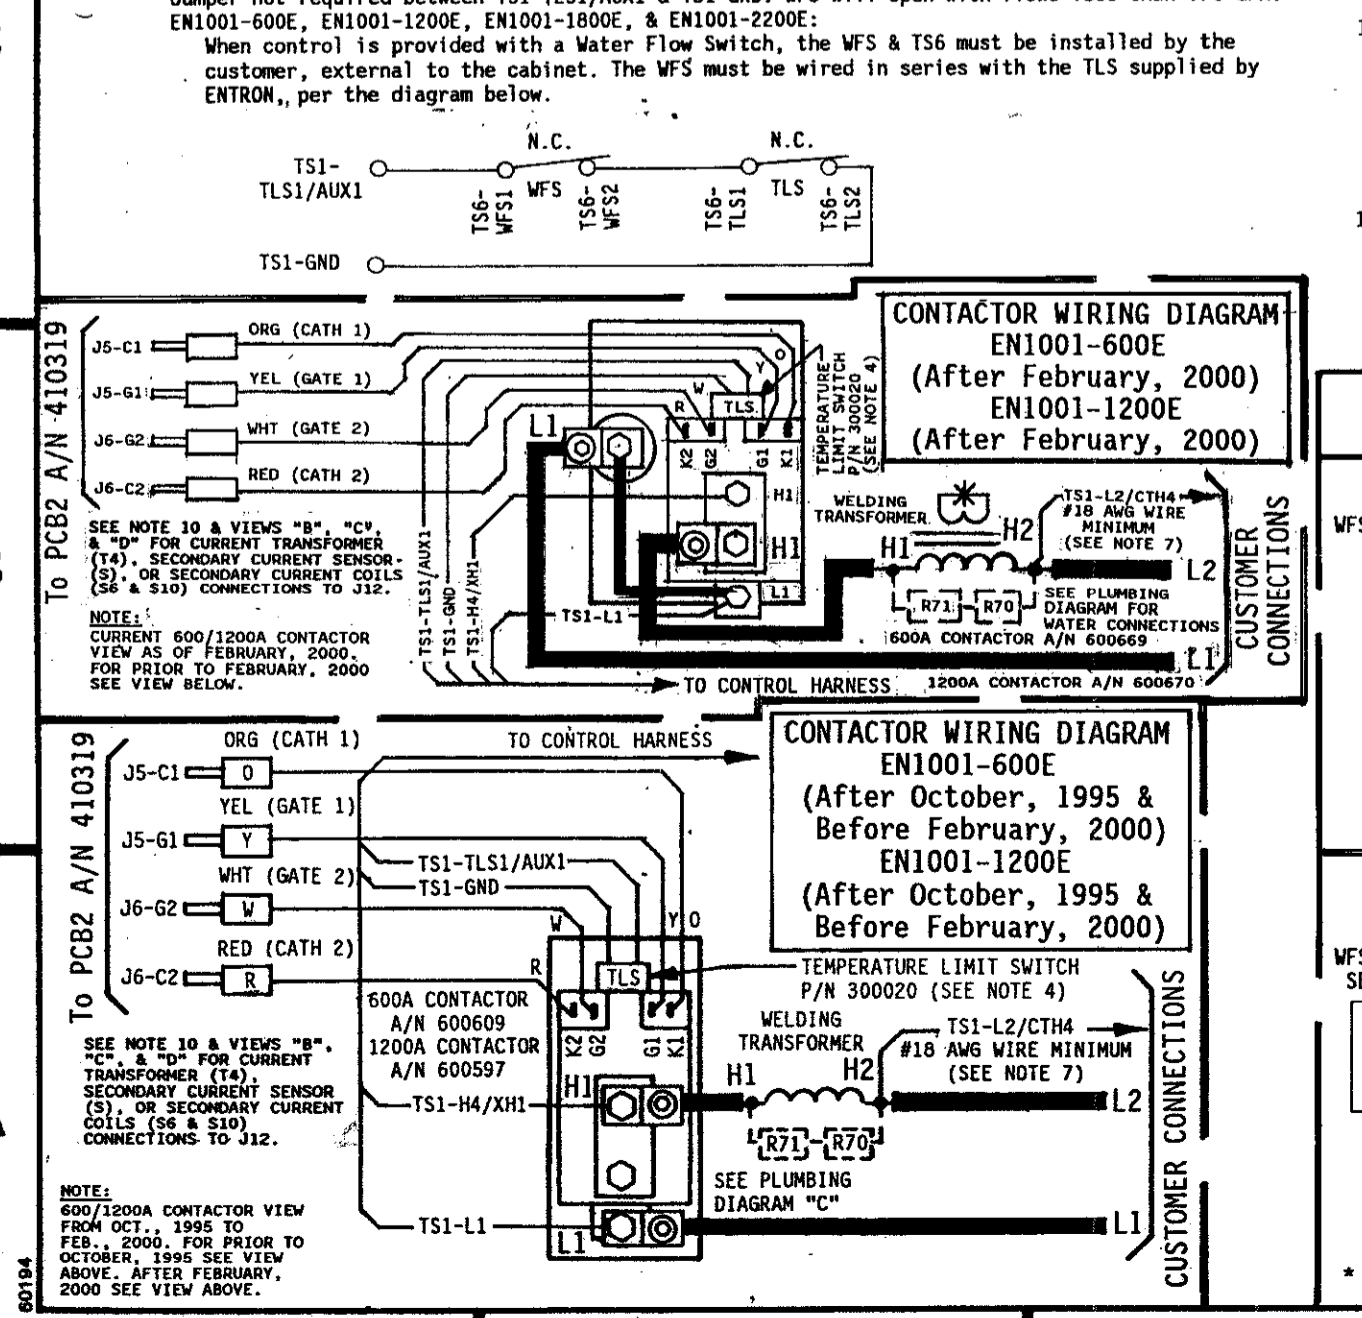

Revision table with columns for REV, AUTH, DESCRIPTION, DRAWN BY, and CHK'D BY. Includes a drawing approval signature and date, and a revision history section.