

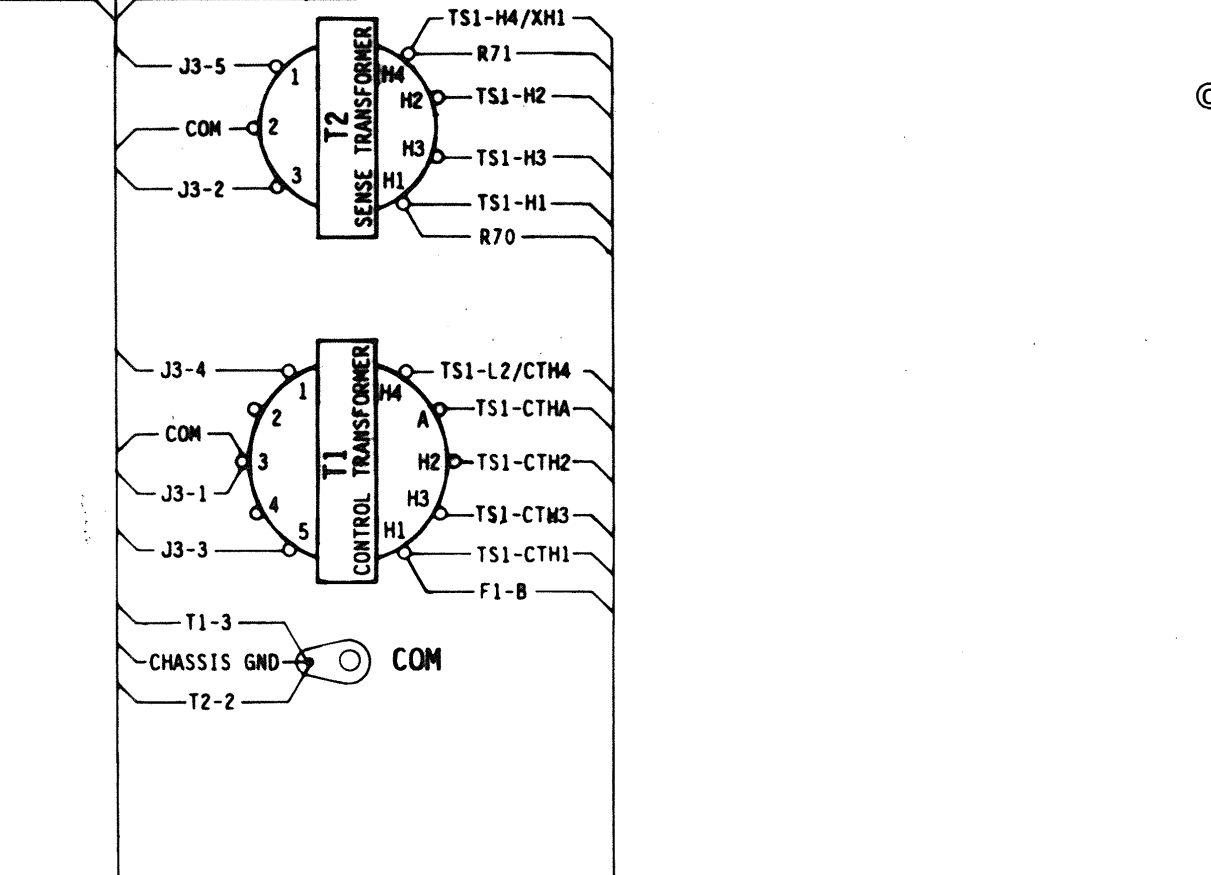
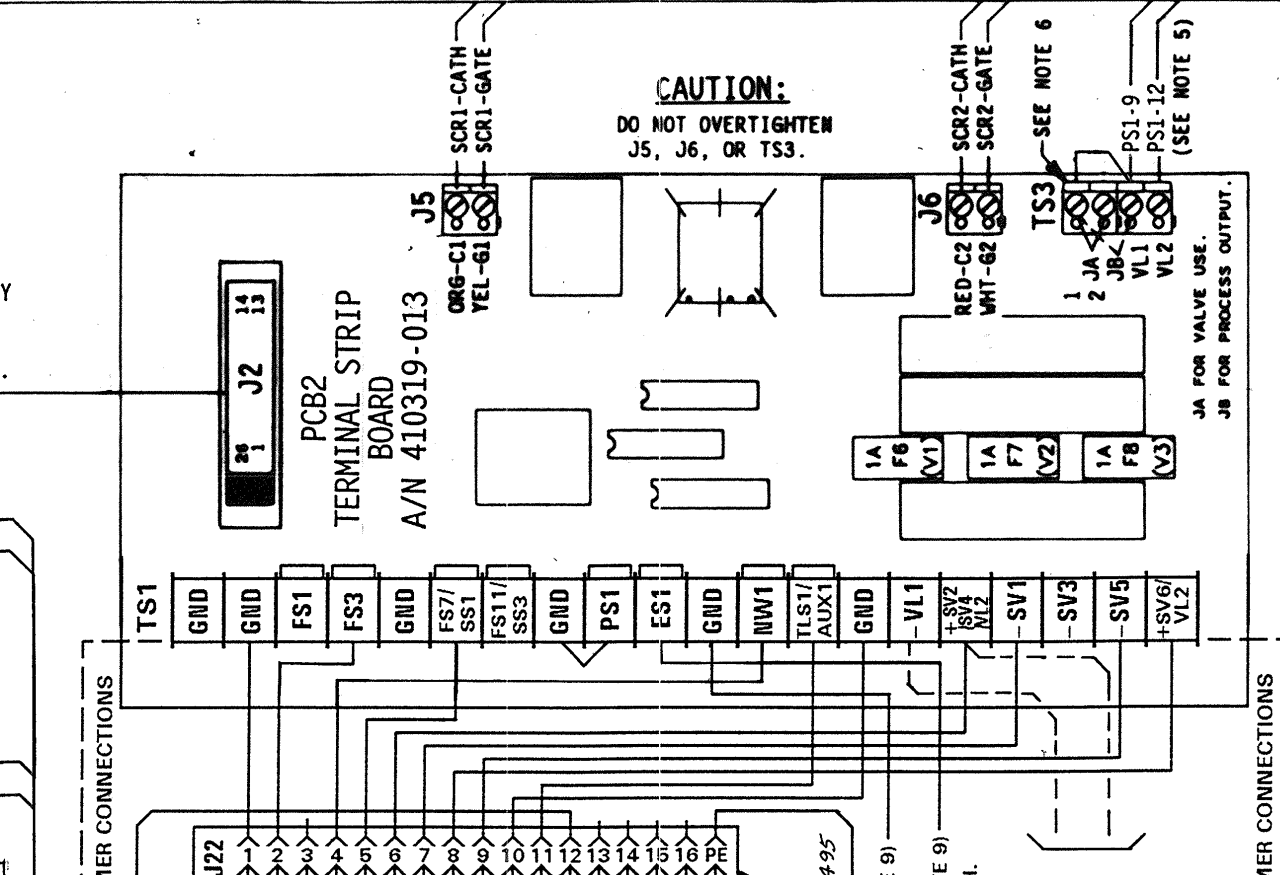
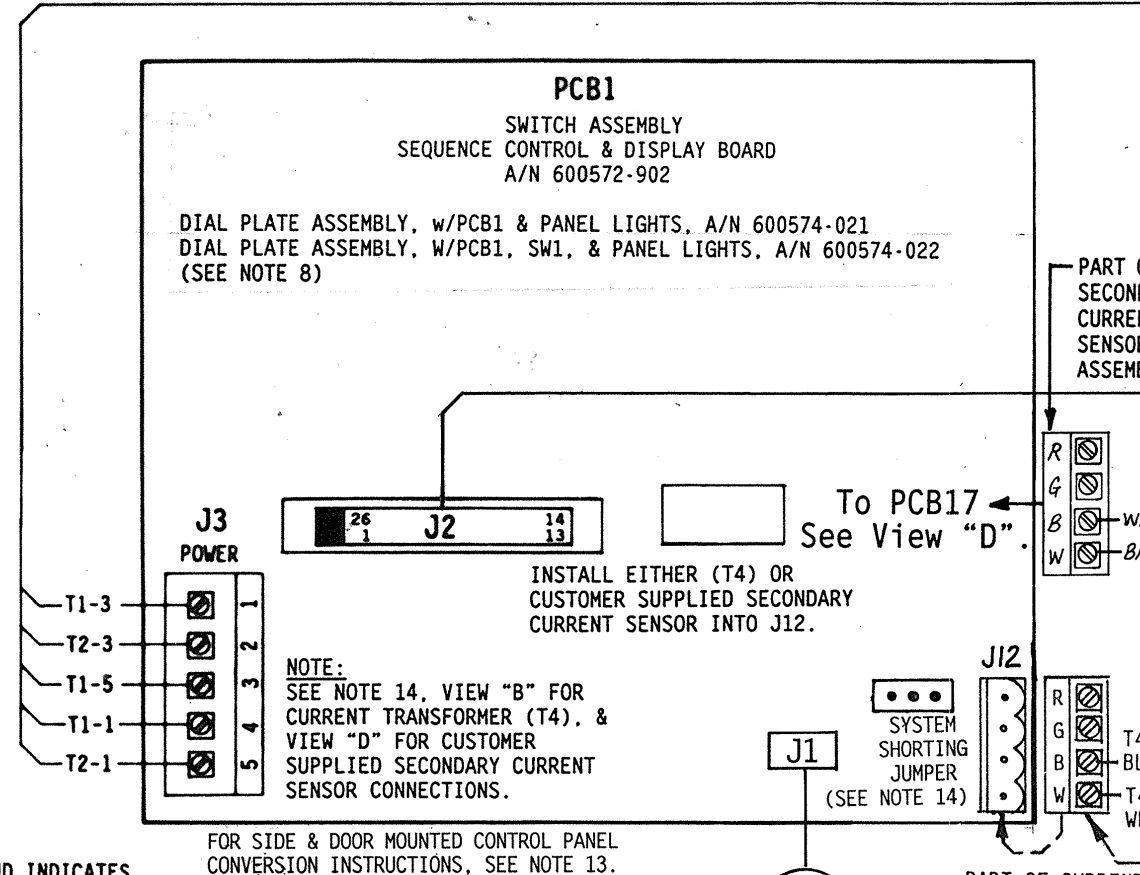
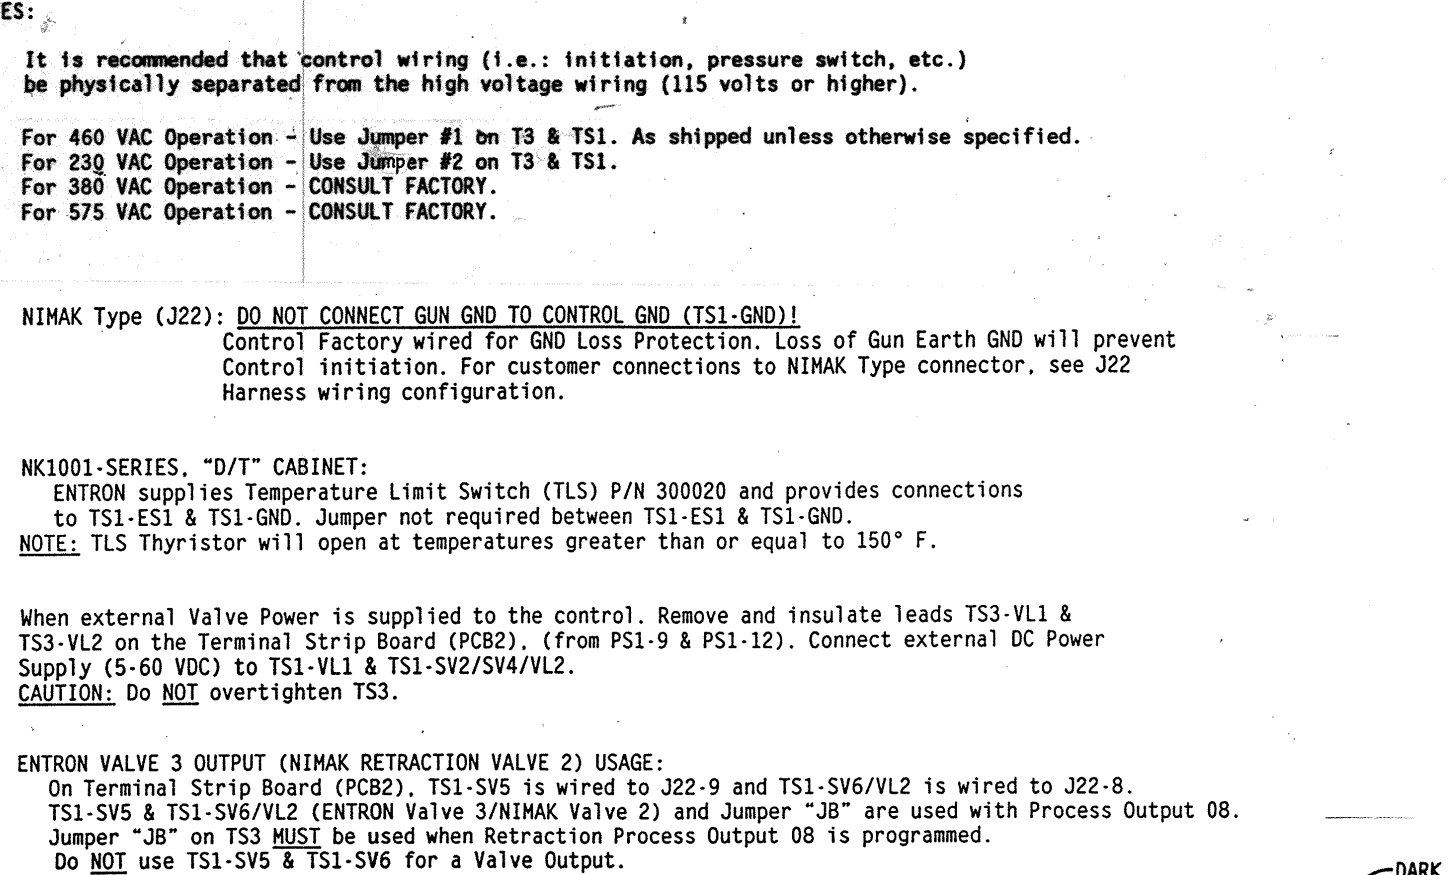
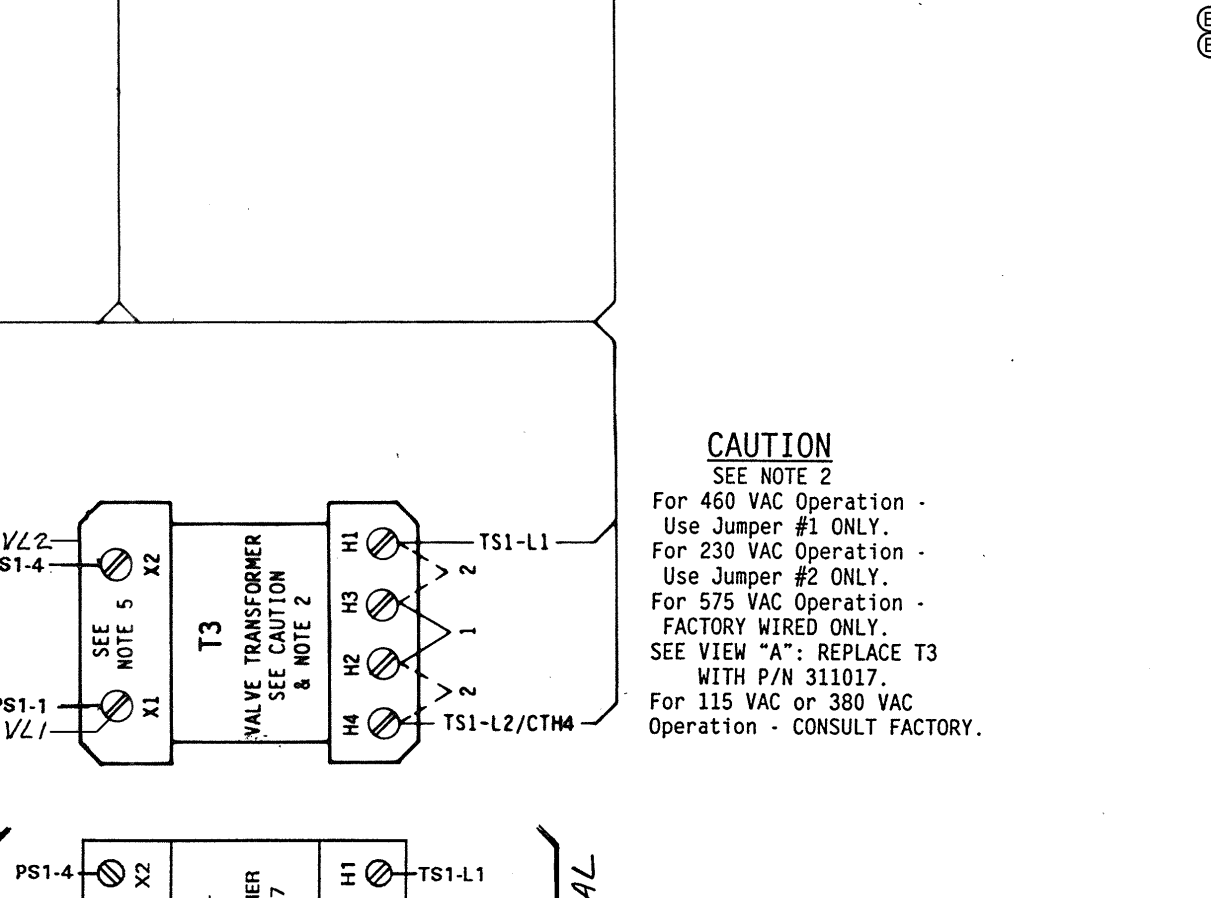
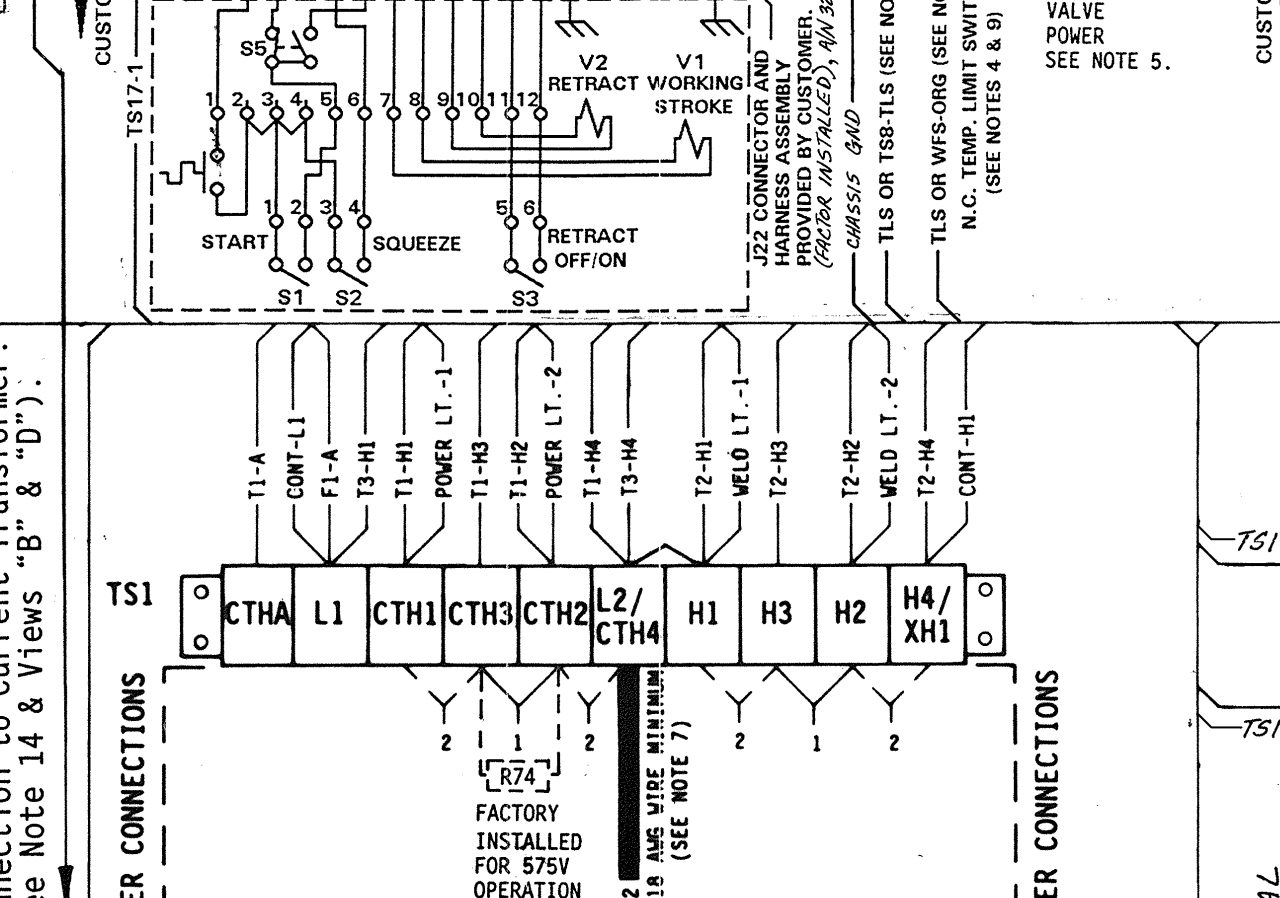






421377-004 C. PARTS LIST - CONTROL SECTION. Table with columns: QTY., DESIG., PART NO., DESCRIPTION.

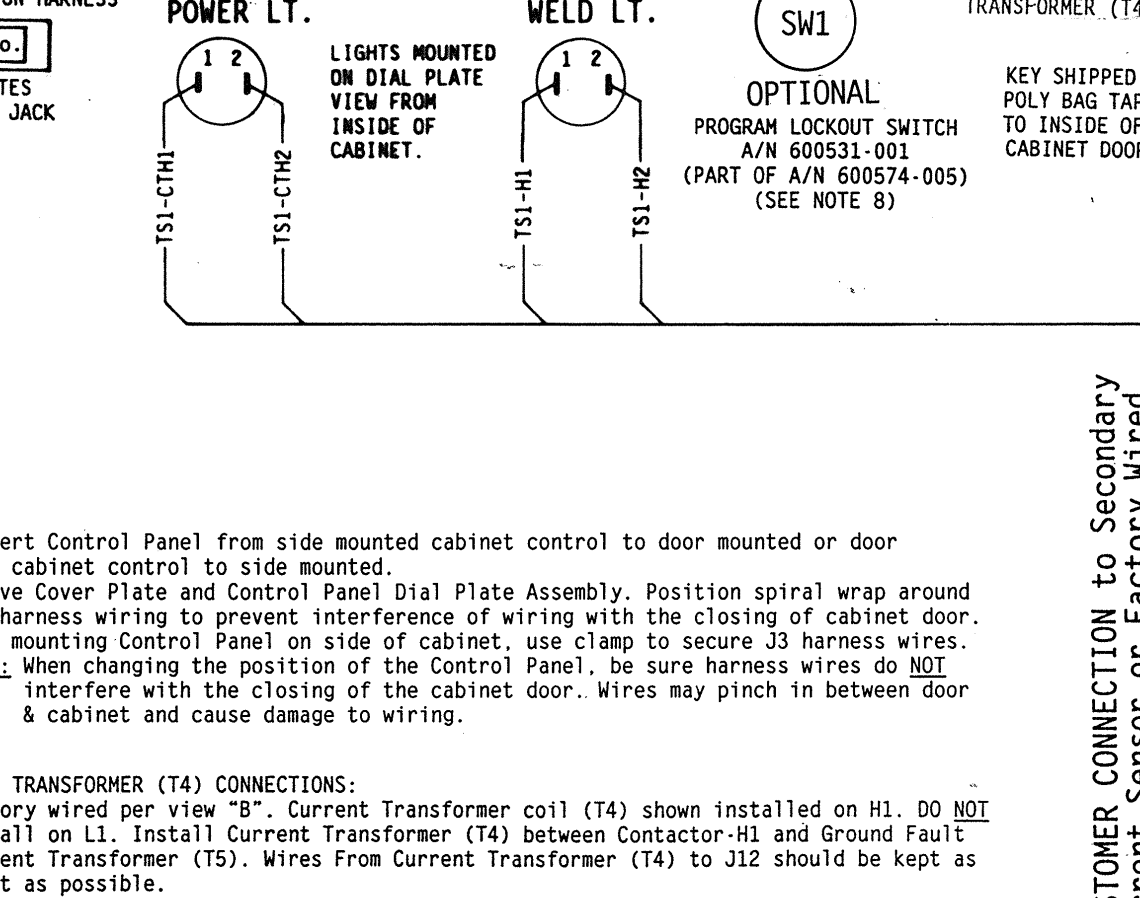

PARTS LIST - CONTACTOR SECTION. Table with columns: QTY., DESIG., PART NO., DESCRIPTION.

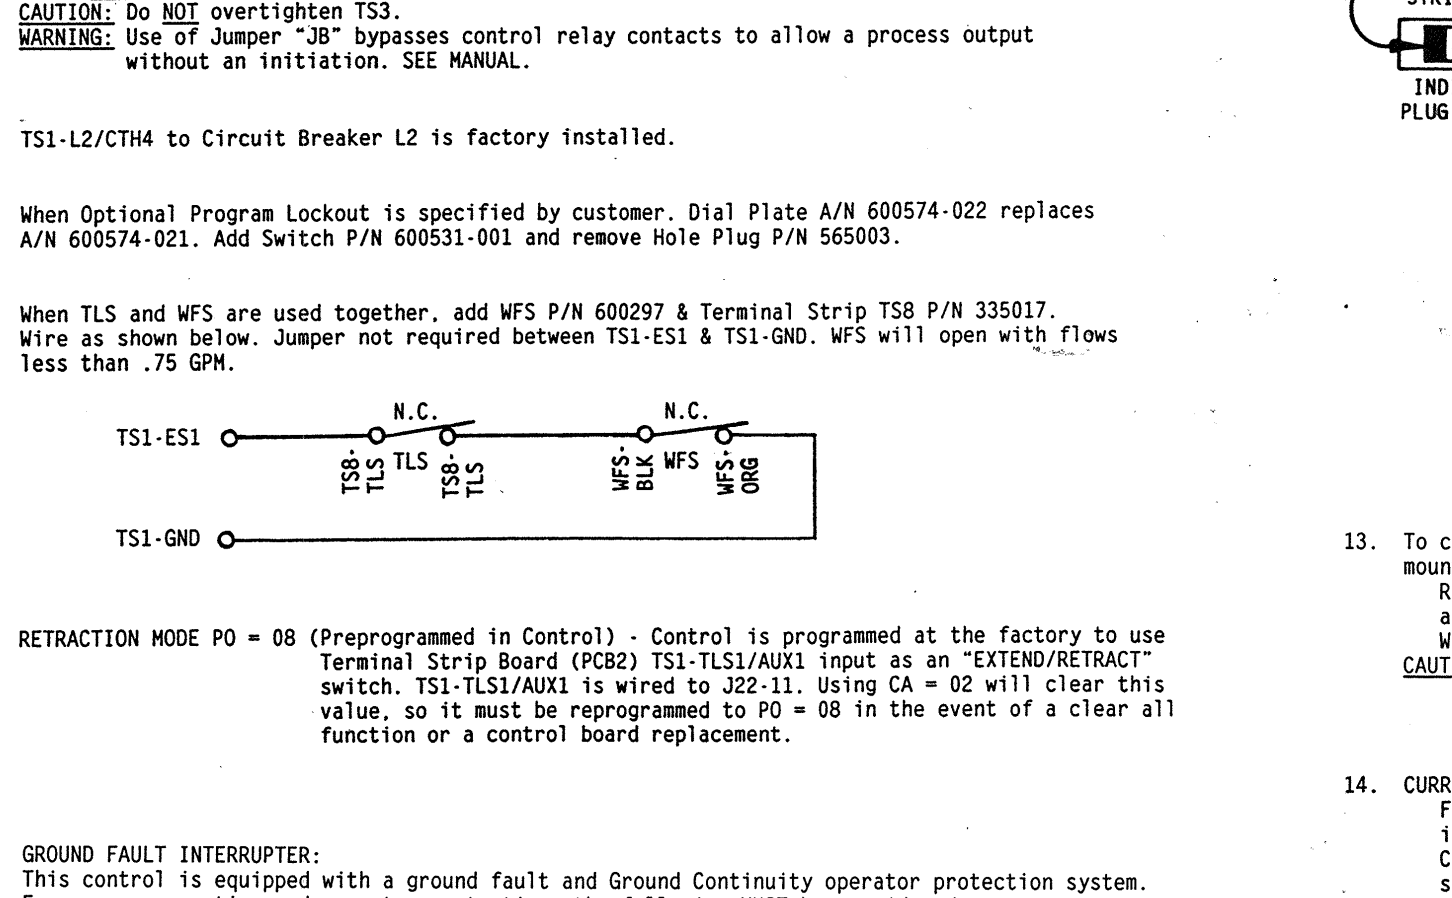

Notes 23-26. Includes instructions for current transformer (T4) connections and current sensor connections.

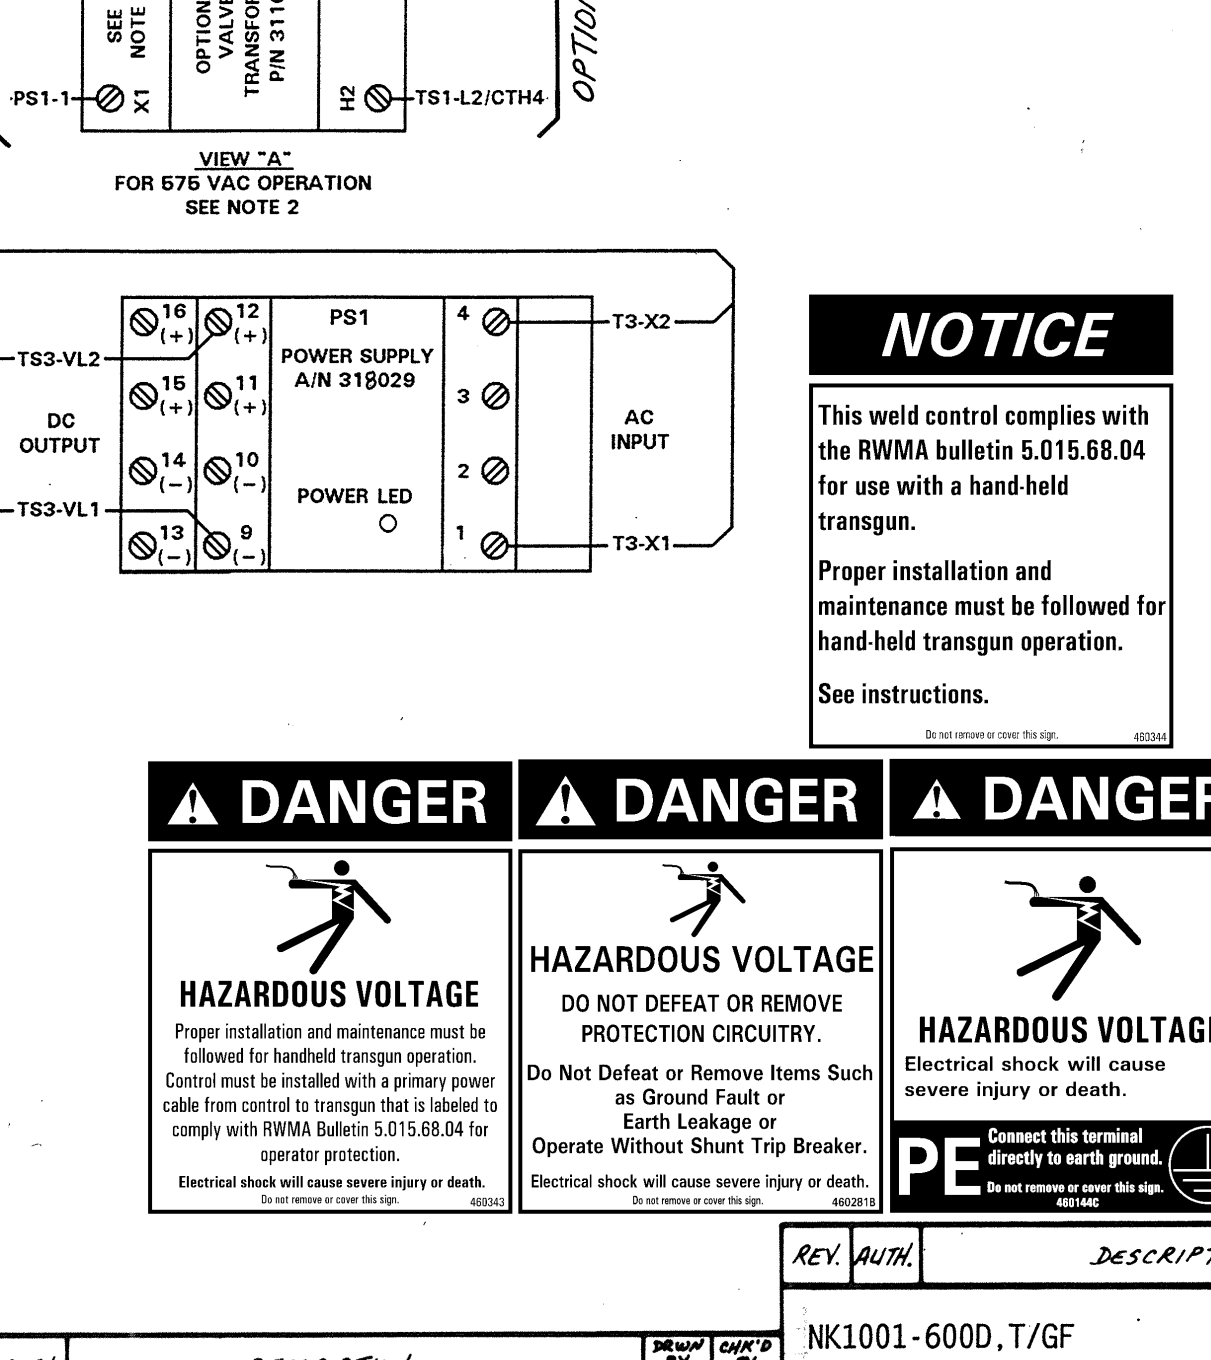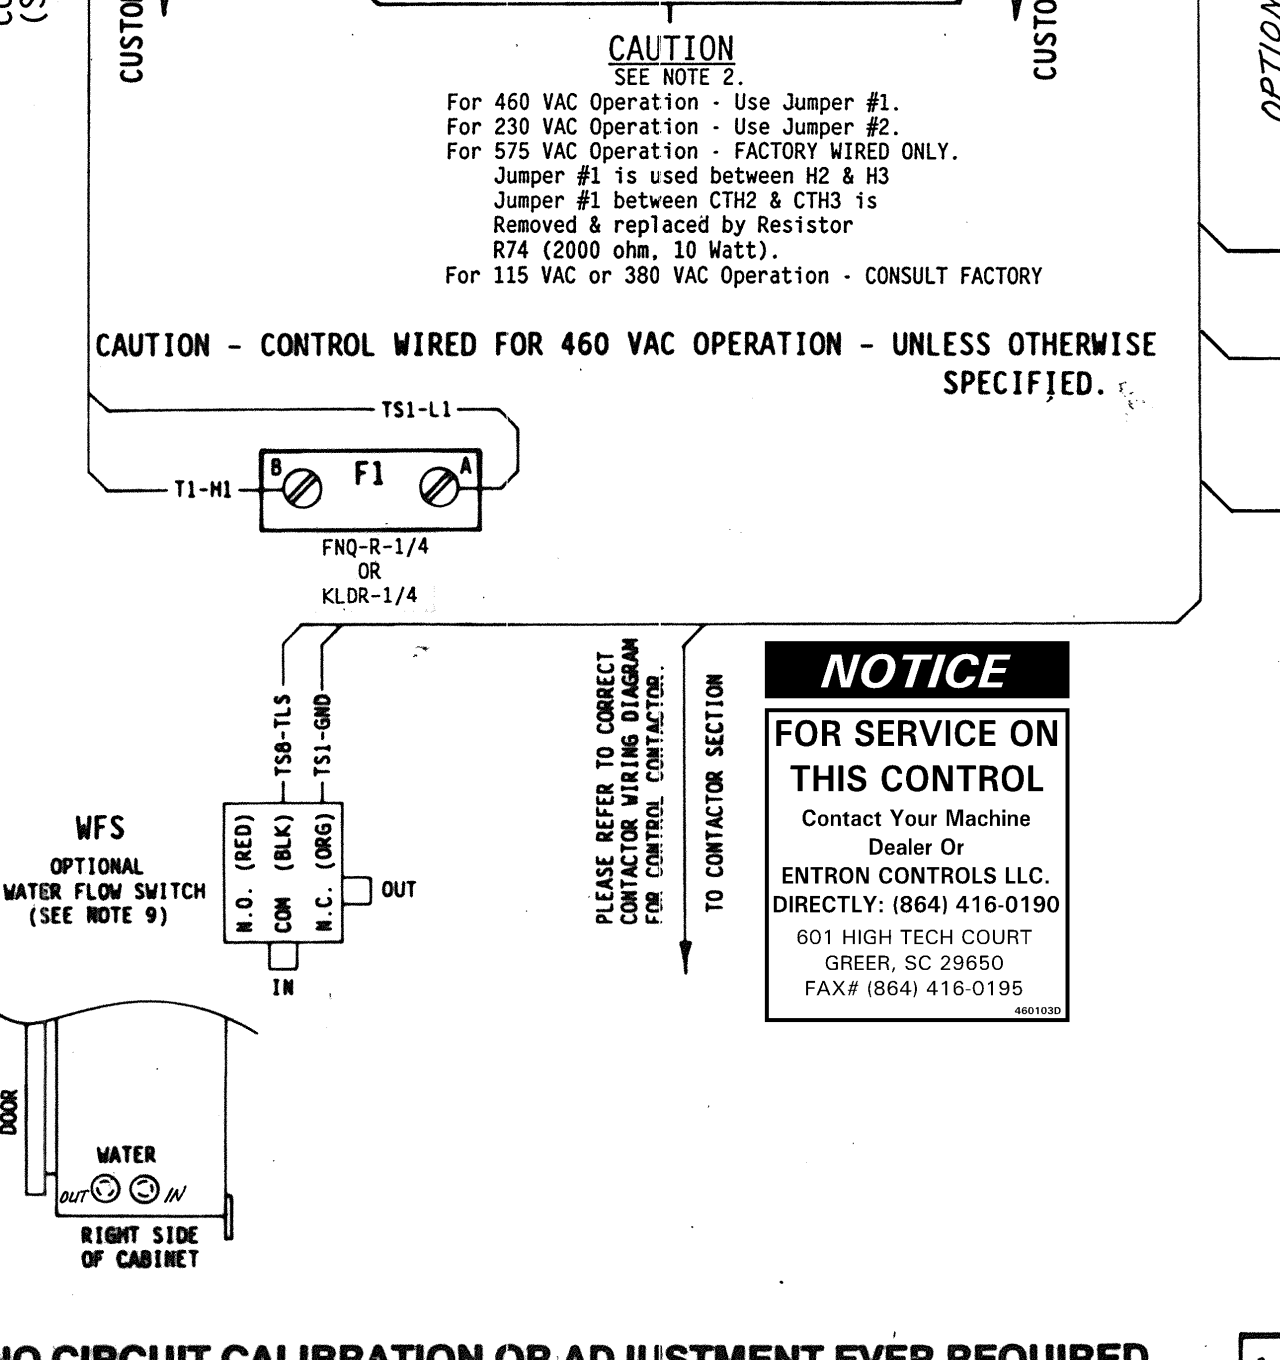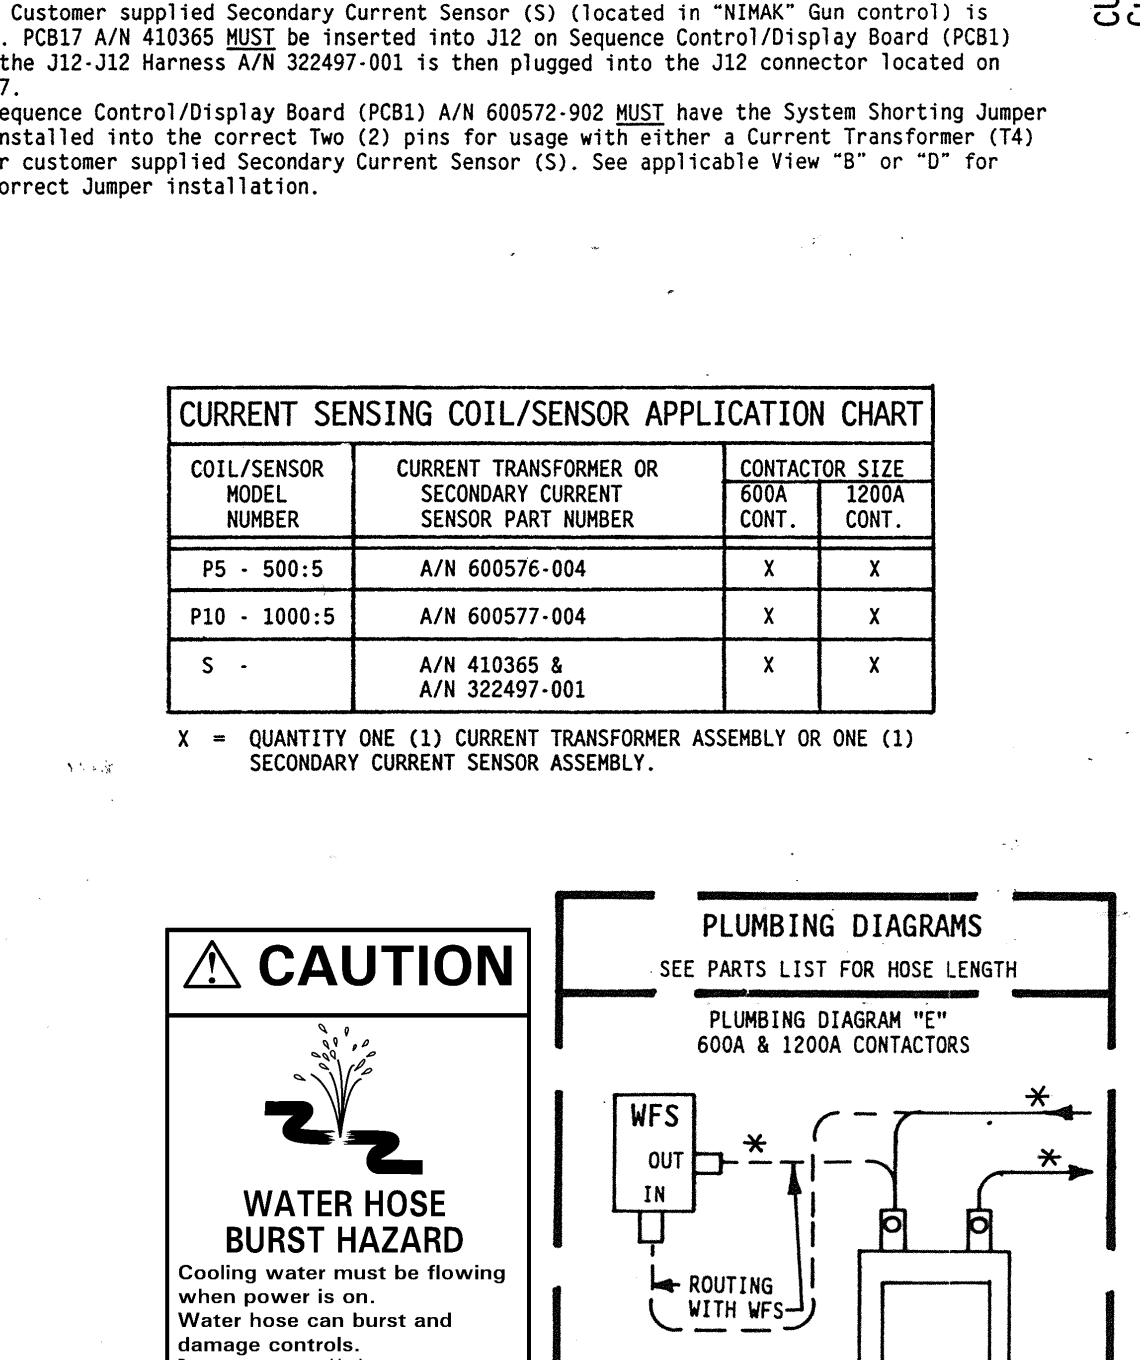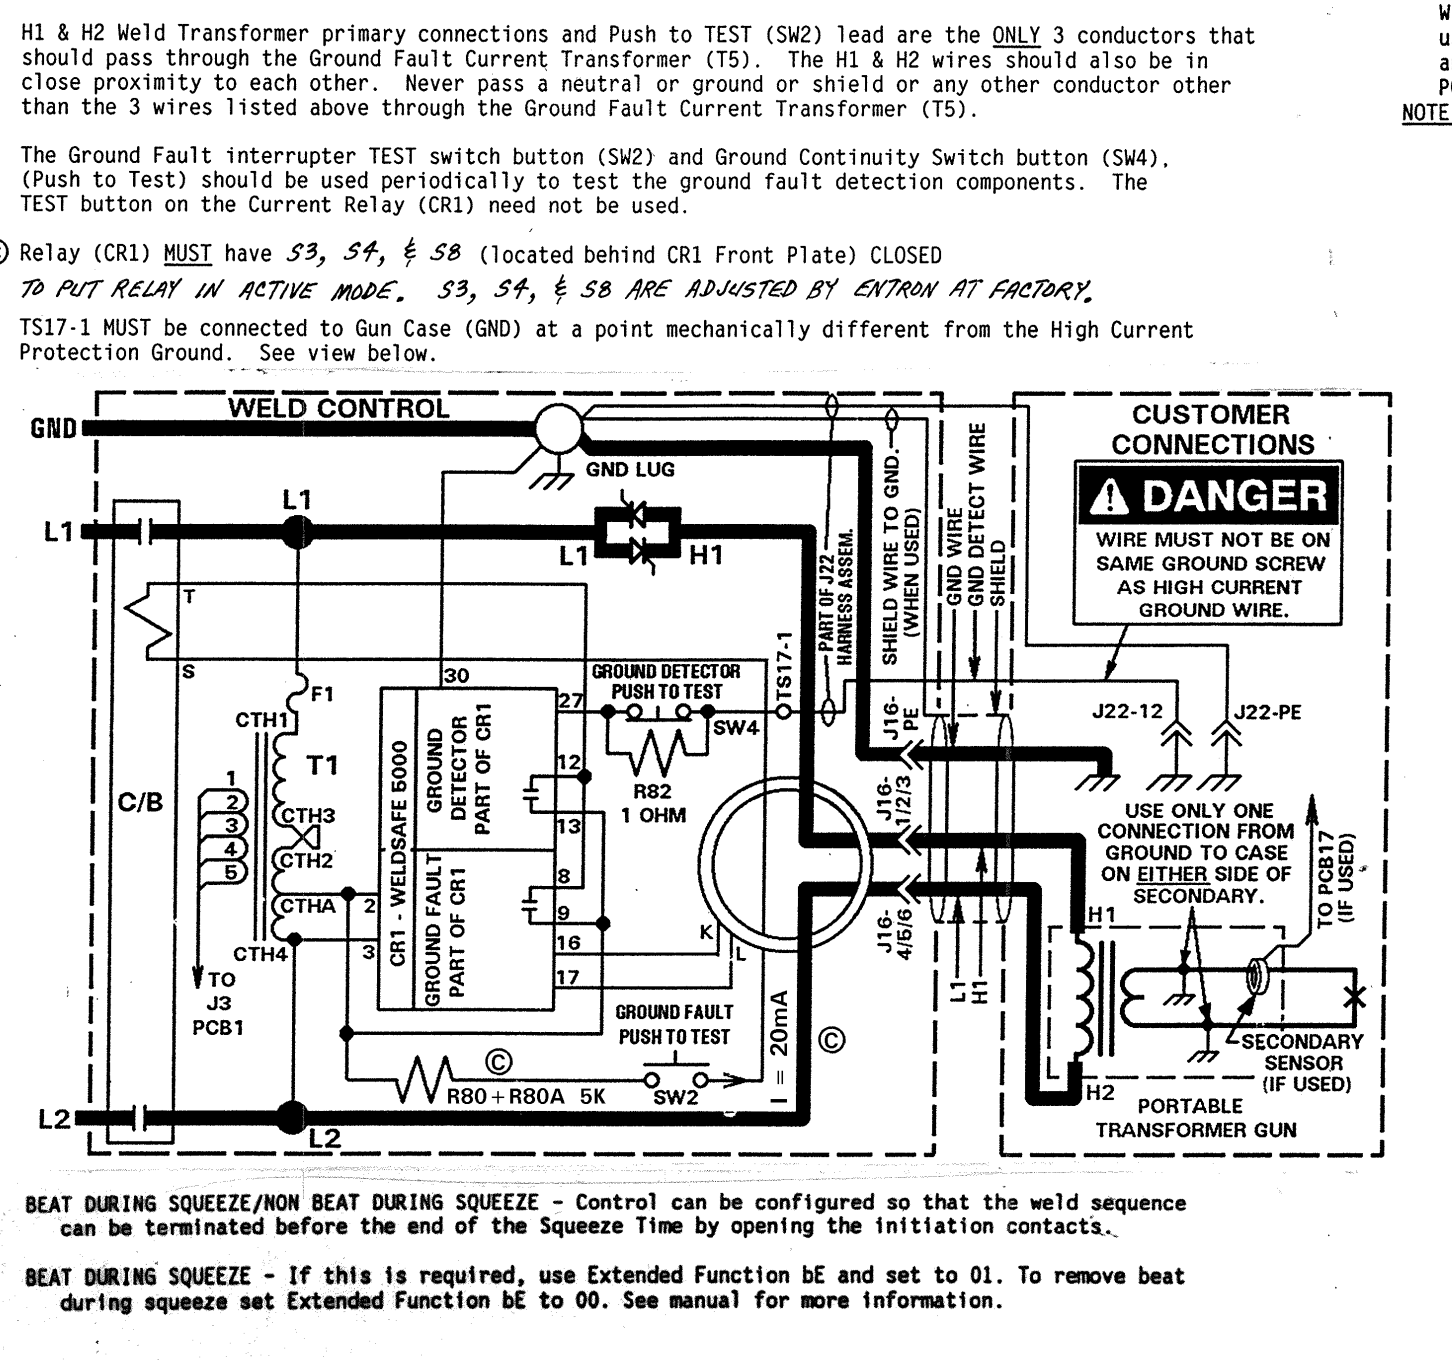

NOTICE. This weld control complies with the RWMA bulletin 5.015.68.04 for use with a hand-held transpun operation. See instructions.