

# ENTRON

**Data Sheet** 

TD90090-5L

Product Model


**iPAK 1000AW** 

February 2, 2022

# 1 iPAK 1000AW water cooled resistance welding inverter

### **Typical Configurations:**

The 1000-amp inverter is suitable for the following resistance welding applications: - Spot, Projection and Seam welding including Cross wire welding and Industrial heat treating of metal parts.

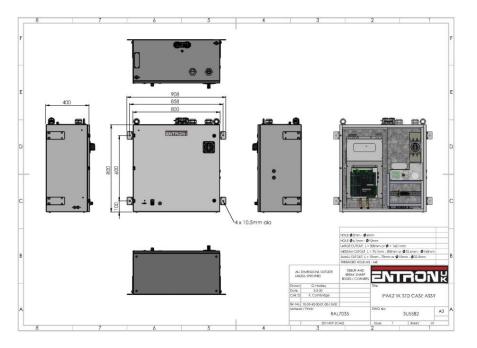

Complete engineered welding control in self-contained easy to install cabinet, including safety screens, circuit breaker with door interlocking, optional isolation contactor, power supplies and earth leakage protection.

iPAK 1000AW with typical suitable transformer/rectifier (Averaging Time 2 Seconds)							
Transformer type	TDC-1078	TDC-1078	TDC-1036	TDC-5876			
kVA	170 kVA	170 kVA	250 kVA	320 kVA			
Transformer primary V	650 volts	650 volts	650 volts	650 volts			
Secondary Voltage	9.5 volts	13.0 volts	13.0 volts	9.0 volts			
Turns Ratio	68:1	50:1	50:1	72:1			
Sec. Current @ 3%	47,200 Amps (D)	47,200 Amps (C)	47,200 Amps (D)	67.000 Amps (D)			
Sec. Current @ 10%	33,000 Amps (D)	29,241 Amps (T)	33,000 Amps (D)	47,000 Amps (D)			
Sec. Current @ 20%	26,800 Amps (D)	20,676 Amps (T)	26,800 Amps (D)	37,200 Amps (D)			
Sec. Current @ 50%	17,785 Amps (T)	13,077 Amps (T)	19,231 Amps (T)	24,615 Amps (T)			
Sec. Current @ 100%	12,576 Amps (T)	9,247 Amps (T)	13,598 Amps (T)	17,406 Amps (T)			
3 phase voltage	480 V max	480 V max	480 V max	480 V max			

C=Limited by the inverter

T=Limited by transformer kVA D=Limited by secondary diodes

#### Important note:



The current values shown in the above tables take no account of the secondary resistance of the machine, which in most circumstances will have a significant effect on the maximum current available from the system. The figures given are only intended as a guide and to demonstrate the limiting factors.

Copyright © 2021 BF ENTRON and/or its affiliates. All rights reserved



General Power Specification		
Maximum output power @ 20% Duty-cycle @ 2 seconds averaging time	650 kVA @ 480 V line voltage	
Maximum line input voltage	480 V ac +10%-20%@ 50/60 Hz	
Maximum output current – Limited electronically	1000 Amps	
Maximum Continuous output current	447 Amps	
Maximum line input current per phase	577 Amps	
Continuous equivalent rms line current per phase (1000@20% duty)	258 Amps	
Power Factor	Leading	
Current regulation and feedback	Primary and secondary	
Current regulation accuracy	± 2 %	
Current regulation repeatability	± 1%	
Inverter switching frequency	1 kHz	
Maximum averaging time	2 seconds	
Water flow rate	10 litres per minute	
Maximum inlet water temperature	25 degrees centigrade	

Copyright  $\ensuremath{\mathbb{C}}$  2021 BF ENTRON and/or its affiliates. All rights reserved



Product Model: iPAK 1000AW

3 | P a g e

Feb. 2, 22 | Data Sheet: TD90900-5L

# 2 Installation of water-cooled iPAK AW inverter modules to qualify for warranty

These notes are provided to assist customers who are installing inverter module into their own equipment. Failure to follow these rules will render the warranty void.

- 1. The inverter must be fitted into a customer cabinet which is sealed against ingress of dust.
- 2. There must be a free air space around all sides of the inverter module of at least four inches or 100mm.
- 3. The cabinet internal ambient temperature must not rise above 104 degrees Fahrenheit or 40 degrees Centigrade when under normal operating conditions.
- 4. All entry and exit conduits must be sealed with appropriate bulkhead fittings or glands.
- 5. All unused holes must be sealed.
- 6. The inverter must be supplied with three phase AC via an earth leakage circuit breaker (ELCB or GFI), suitably rated for the inverter (please see BF ENTRON Data sheet), with thermal and magnetic trips. This is required to provide protection for the inverter in the event of a device failure.
- 7. Maximum load/transformer primary current must not exceed the inverter rated current at the machine maximum duty cycle specified over the averaging time of two seconds (see BF ENTRON graph).
- 8. Duty cycle limits must not be exceeded beyond those specified in the BFE data sheet.

Water flow must be at leas	Water flow must be at least the following:		
iPAK 150AW	1 gal/min or 5 litres/min		
iPAK 360AW	1 gal/min or 5 litres/min		
ipak 600AW	1.5 gal/min or 7.5 litres/min		
iPAK 1000AW	2 gal/min or 10 litres/min		
iPAK 1500AW	2 gal/min or 10 litres/min		
iPAK 3000AW	4 gal/min or 20 litres/min		
iPAK 4500AW	6 gal/min or 30 litres/min		
iPAK 6000AW	8 gal/min or 40 litres/min		

- 10. A water management system must be used which is independent of both the machine and the welding transformer cooling systems.
- 11. The water management system must have the following components in each flow path:
  - I. A manual flow regulator or constant flow valve.
  - II. A programmable flow switch which is monitored by the welding control or line PLC.
  - III. A shut off valve.
  - IV. The water flow must drain to atmosphere.
- 12. Inlet water temperature must not exceed 77 degrees Fahrenheit or 25 degrees Centigrade.
- 13. The water temperature must not be low enough to cause the formation of condensation inside the inverter.
- 14. Water savers may be used, but should be used on the water outlet of the inverter. Water flow should be started at least half a second before a weld commences and the water must remain flowing for at least one minute after the weld has finished.

If the above conditions cannot be met BFE can supply a self-contained cabinet with earth leakage circuit breaker.

Copyright © 2021 BF ENTRON and/or its affiliates. All rights reserved



#### Important Notes – Warranty Exclusions:

- a. Excessive dust or moisture contamination may render the warranty void.
- b. Excessive internal cabinet temperatures may cause the inverter to be damaged and the warranty will be void.
- c. Evidence of significant inverter damage as a result of unprotected flash over as a result of no ELCB (GFI) being fitted will render the warranty void.

#### Suggested Minimum Installation Data for iPAK 6000AW:

#### Important Note:

All the calculations for cable sizing assume that the inverter will be used at maximum permissible current and maximum permissible duty cycle, but within the inverter specification.



#### WARNING!



The calculations given below are intended as a guide, and should therefore be checked by a professional electrical engineer to ensure that local installation regulations are met.

#### Assumptions for three phase supply feed:


- Ambient temperature Cable Insulation Conductor temperature Maximum volts drop at full load Continuous current rating for cable sizing Current Rating for volts drop Recommended fusing Recommended thermal/magnetic circuit breaker Minimum cable size for 10 metre feed cable Volts drop over 10 metres of cable @ 577 Amps
- Assumptions for Welding transformer feed:
- Ambient temperature Cable Insulation Conductor temperature Maximum volts drop at full load Continuous current rating for cable sizing
- Current Rating for volts drop
- Minimum cable size for 10 metre feed cable
- Volts drop over 10 metres of cable @ 1000 Amps

- = 30°C (86°F)
- = Butyl
- = 85°C (185°F)
- = 5% of nominal supply voltage.
- = 258 Amps (thermal equivalent current)
- = 577 Amps
- = 300 Amps HRC
- = 250 Amps
- = 70 sq. mm (138 kMCM) (flat spaced)
- = 5.7 volts/10 metre length of run
- = 30°C (86°F)
- = Butyl
- = 85°C (185°F)
- = 5% of nominal supply voltage.
- = 440 Amps (thermal equivalent current)
- = 1000 Amps
- = 95 sq. mm (flat spaced)
- = 4.28 volts/10 metre length of run


Copyright  $\ensuremath{\mathbb{C}}$  2021 BF ENTRON and/or its affiliates. All rights reserved



Product Model: iPAK 1000AW

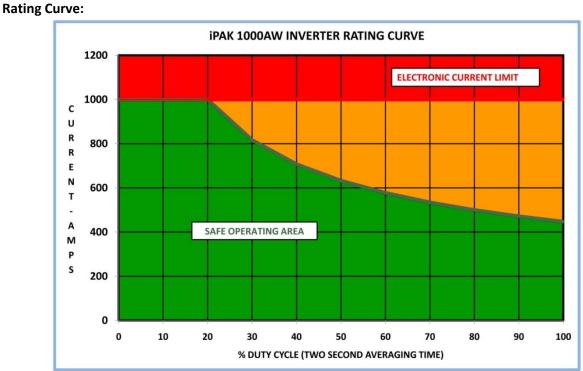

**Outline Drawings – Inverter Module:** 

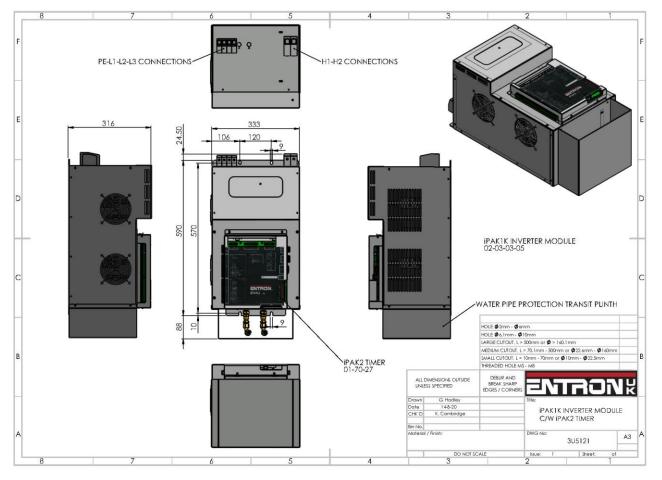

Copyright © 2021 BF ENTRON and/or its affiliates. All rights reserved



Product Model: iPAK 1000AW

## **3** Technical Support

#### 3.1.1 Internet

The latest version of the documentation and other helpful resources in the ENTRON Document Library page found in the Resource section of the ENTRON website: <u>https://www.entroncontrols.com</u>

#### 3.1.2 Documentation Request

Documentation, user instructions and technical information can be requested by emailing ENTRON Controls at <u>customerservice@entroncontrols.com</u> or <u>support@bfentron.co.uk</u>

Please include your name and email

#### 3.1.3 Service and Technical Support

For service and technical support, we request that customers fill out the Technical Support Form found on our website at link below:

 NOTICE
 TECHNICAL SUPPORT FORM LINK

 Image: https://www.entroncontrols.com/resources/technical-support.html

After the web form has been completed, your case will be assigned to one of our technical specialists who will contact you directly.

and service sites is shown in the table below. Please contact the site for your specific region.

Manufacturing Site	Country	Phone	Email	Regions Supported
ENTRON UK	England	+44-1384-455401	support@bfentron.co.uk	Europe, Asia, Africa, Rest of World
ENTRON US	USA	+1-864-416-0190	tech.support@entroncontrols.com	USA, Canada
ENTRON MX	Mexico	+52-844-415-9081	soporte@entronmx.com	Mexico, Central America

Copyright © 2021 BF ENTRON and/or its affiliates. All rights reserved



Product Model: iPAK 1000AW